


SCHEMATIC DIAGRAM-1

NOTE:
The number which noted at the connectors on the schematic diagram as "SCHEMATIC DIAGRAM-1" or "SCHEMATIC DIAGRAM-2" indicates the schematic diagram serial number located on the left corner in the schematic diagram.


OPTICAL PICKUP

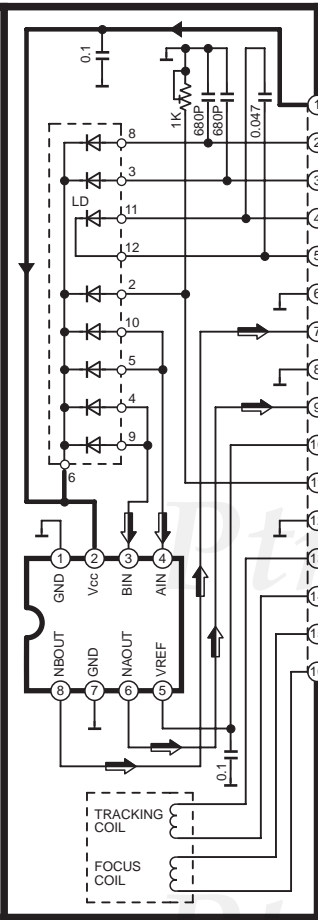

A CD SERVO CIRCUIT

→ : POSITIVE VOLTAGE LINE

⇨ : CD-DA/V-CD(AUDIO & VIDEO) SIGNAL LINE

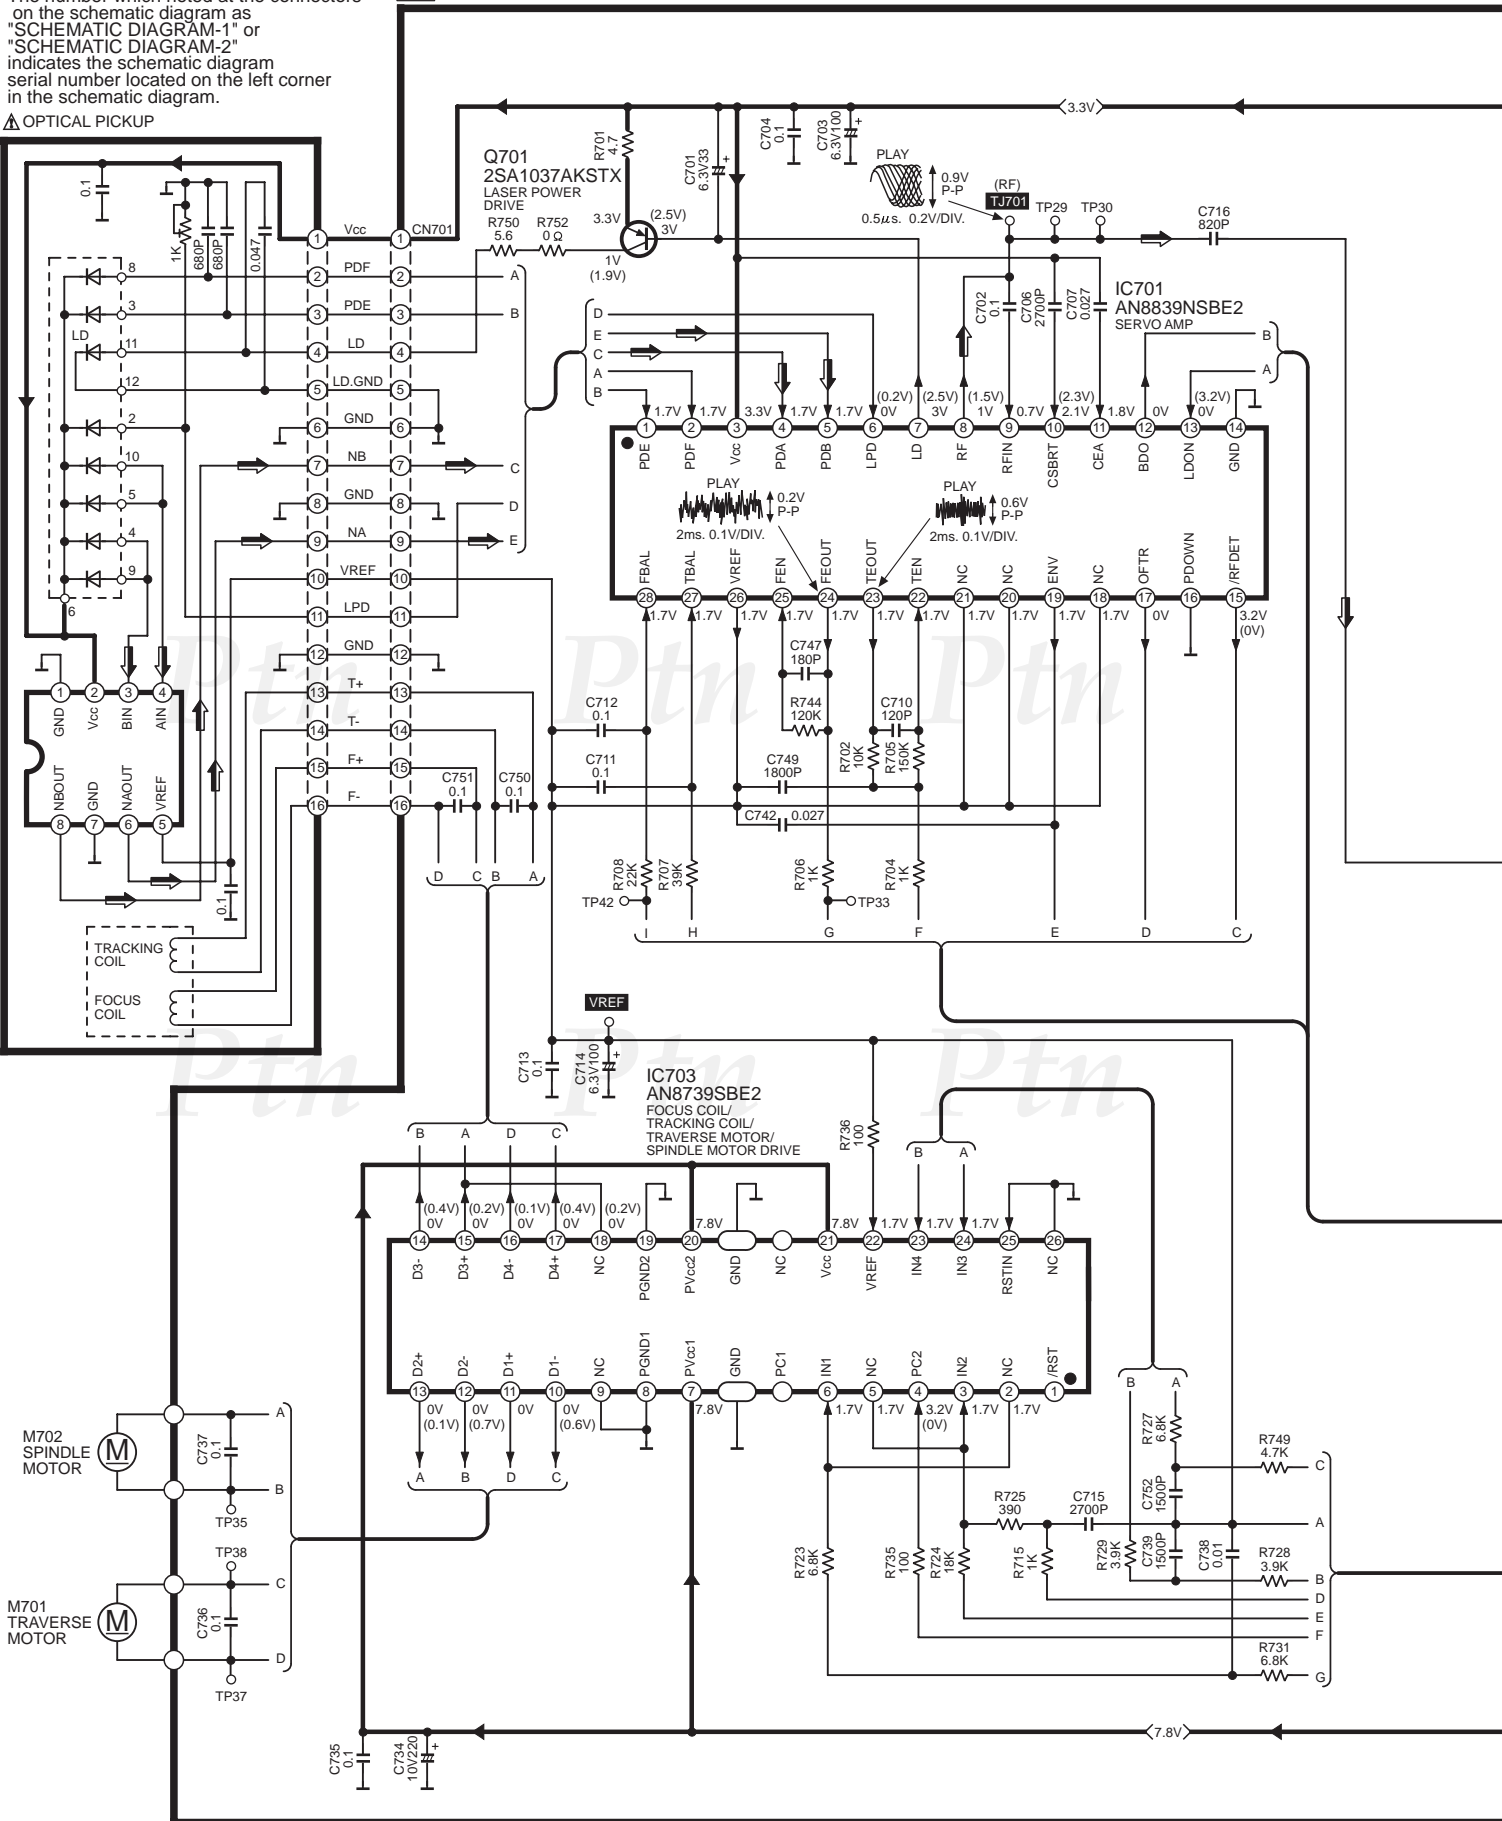


M702 SPINDLE MOTOR

M701 TRAVERSE MOTOR

SCHEMATIC DIAGRAM-2

→ : POSITIVE VOLTAGE LINE ⇨ : CD-DA/V-CD(AUDIO & VIDEO) SIGNAL LINE ⇩ : CD-DA/V-CD(AUDIO) SIGNAL LINE

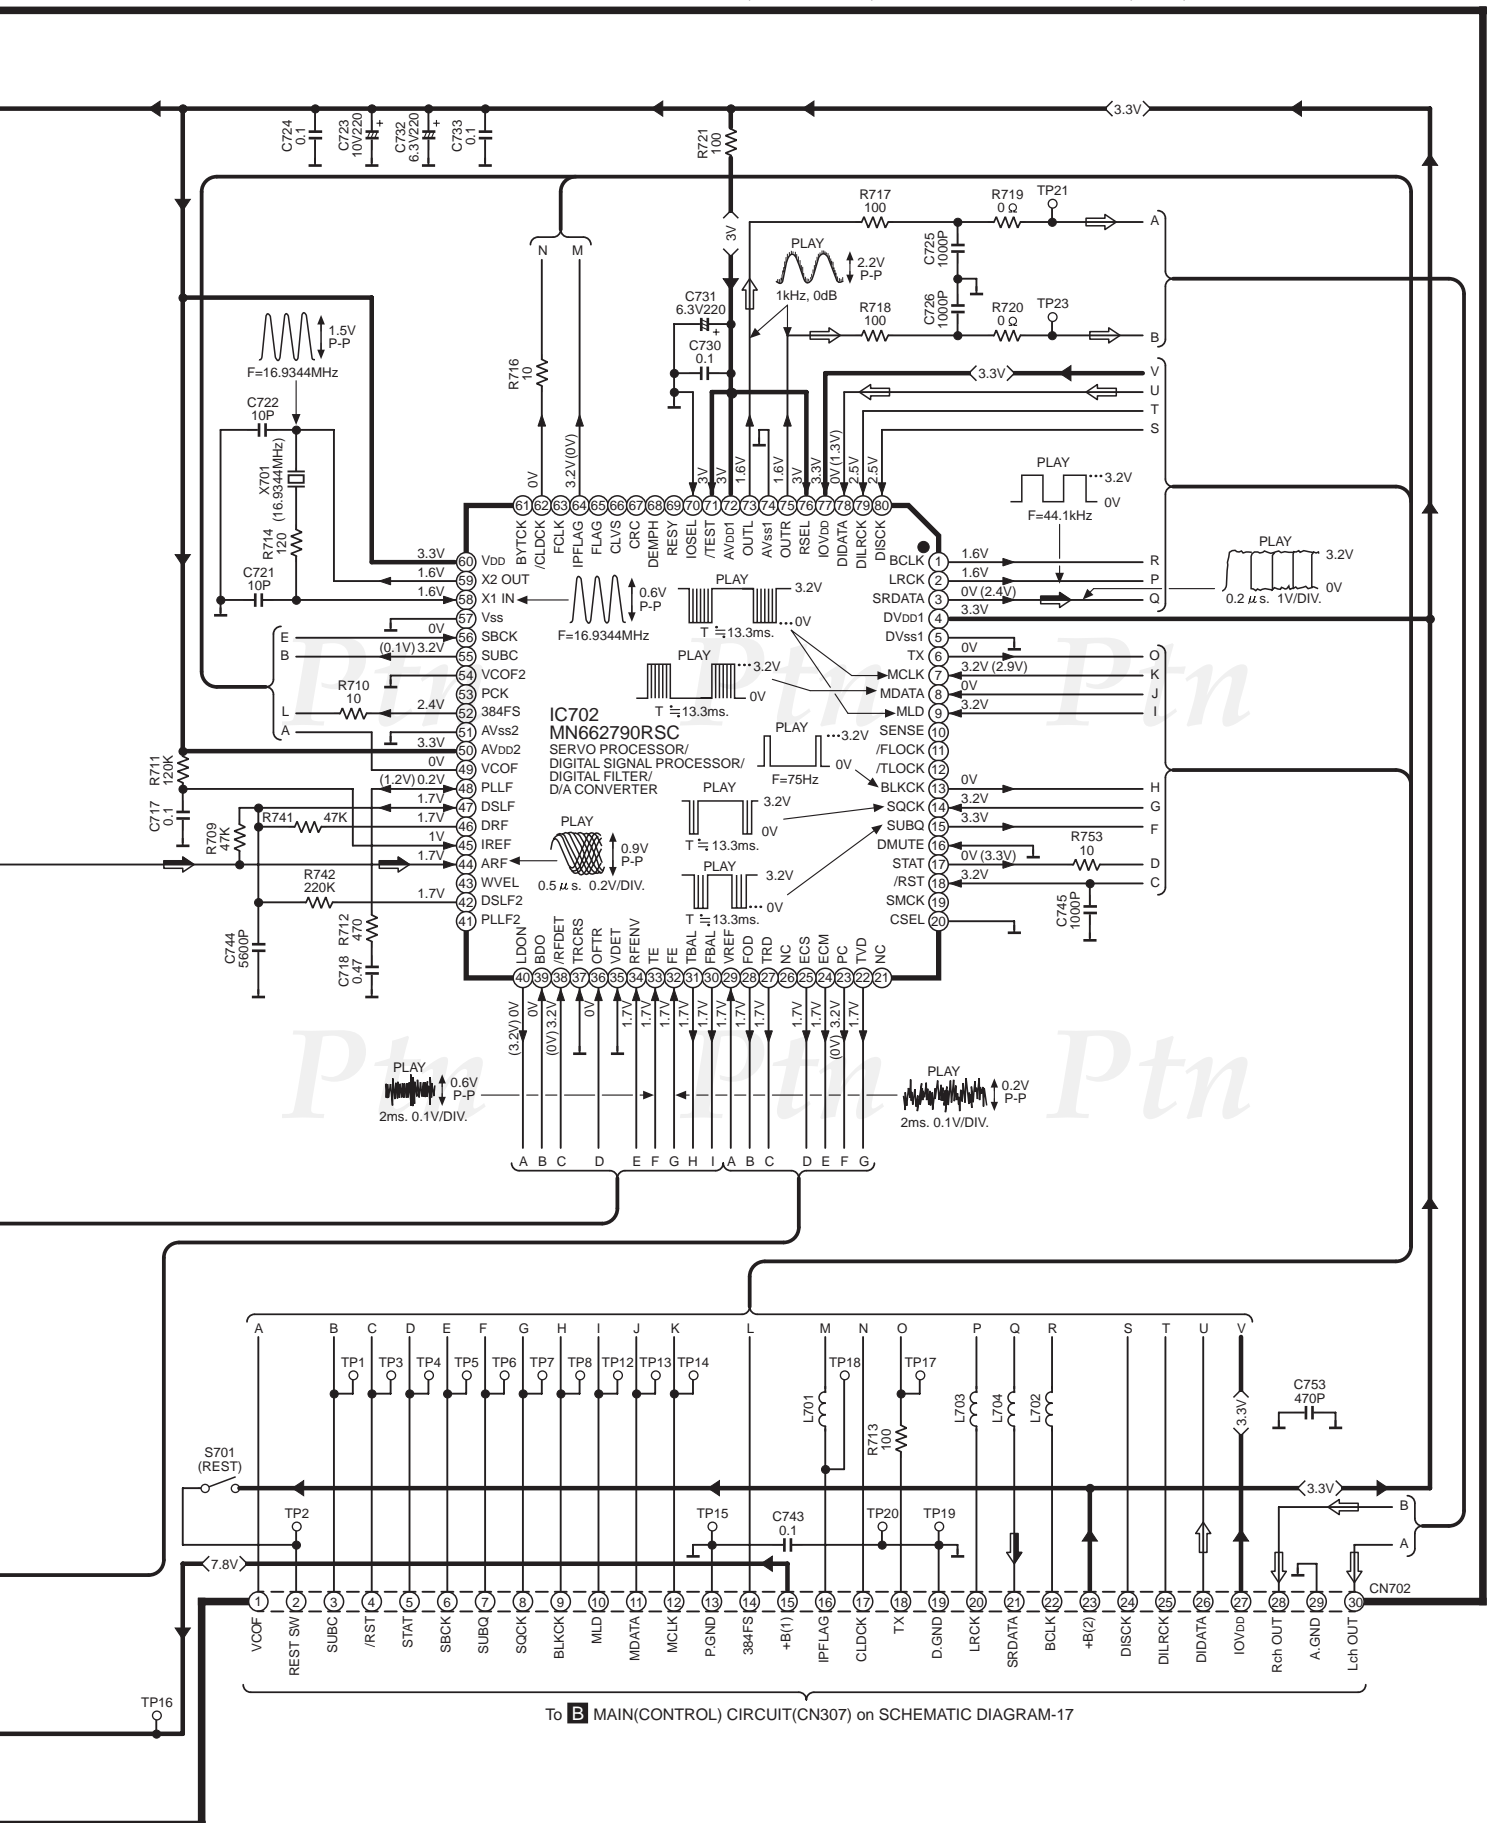

To **B** MAIN(CONTROL) CIRCUIT(CN307) on SCHEMATIC DIAGRAM-17

B MAIN(TUNER) CIRCUIT

→ : POSITIVE VOLTAGE LINE


◻ : FM SIGNAL LINE

◼ : AM SIGNAL LINE

◻◻ : FM OSC SIGNAL LINE


◼◼ : AM OSC SIGNAL LINE

P FM FRONT END(Z120) CIRCUIT

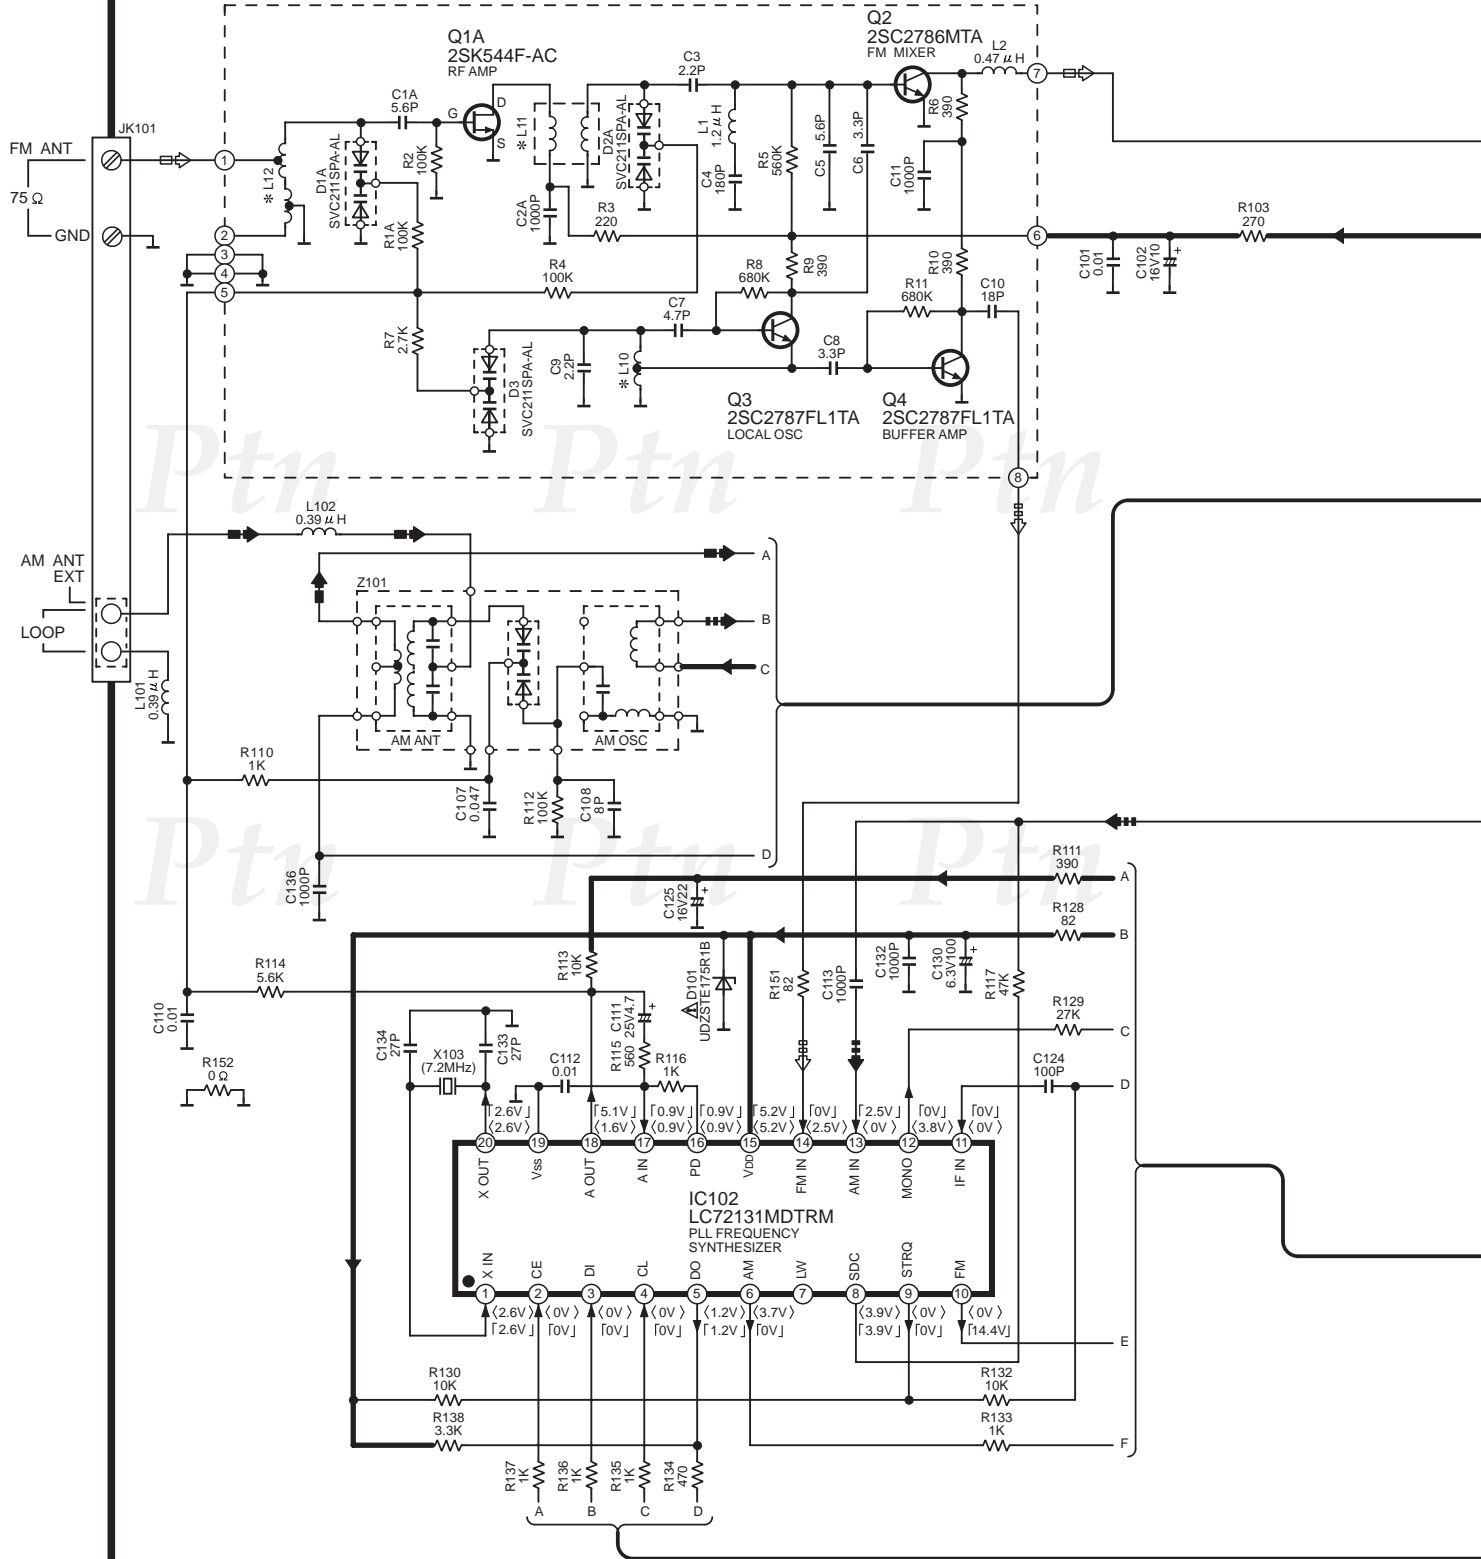

SCHEMATIC DIAGRAM-4

: POSITIVE VOLTAGE LINE
 : FM SIGNAL LINE
 : AM SIGNAL LINE
 : AM OSC SIGNAL LINE

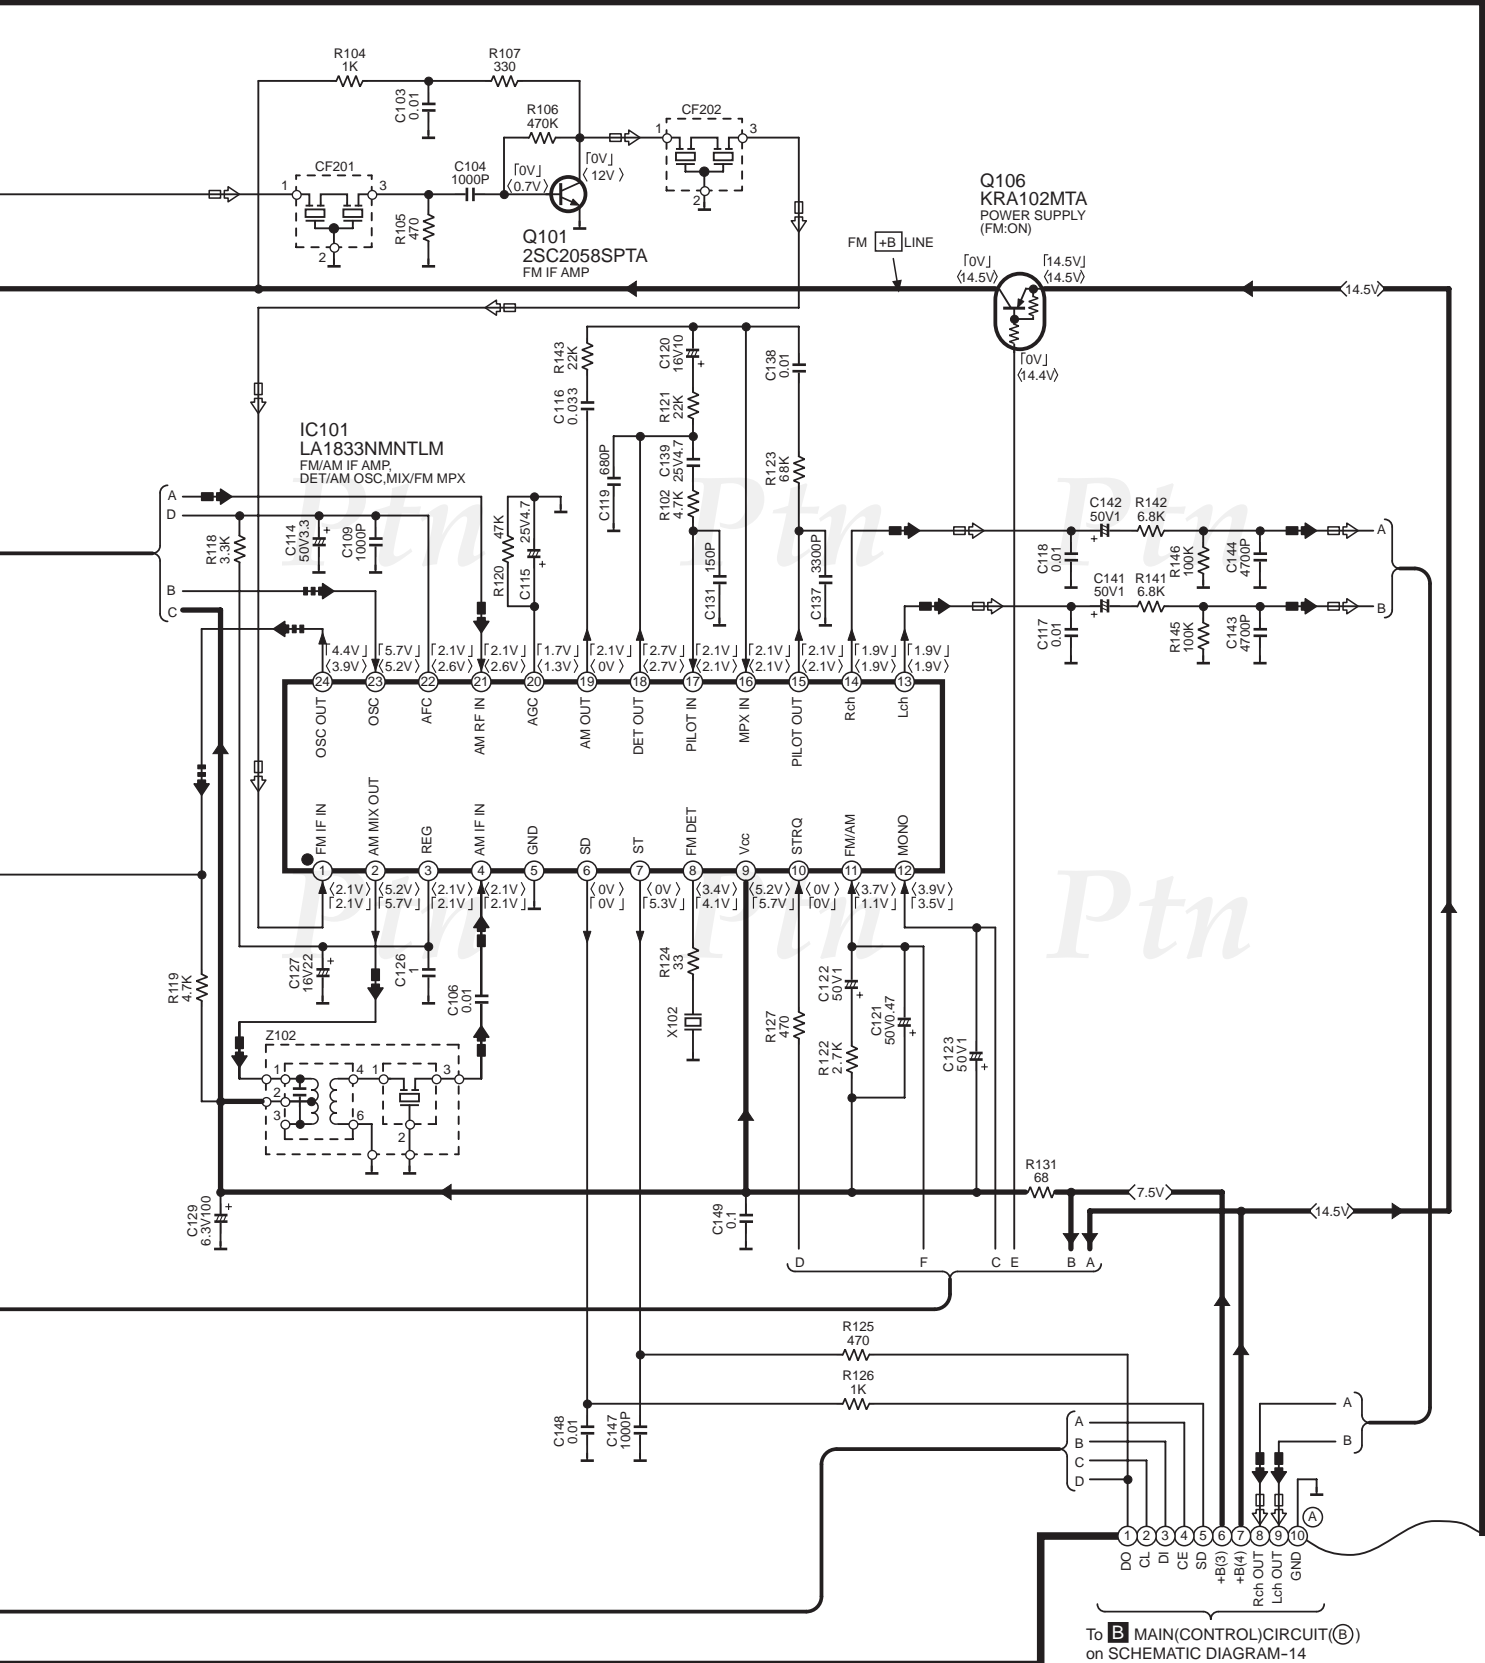


SCHEMATIC DIAGRAM-7

C MECHANISM CONTROL CIRCUIT

▶ : TAPE PLAYBACK SIGNAL LINE

→ : POSITIVE VOLTAGE LINE


◀ : TAPE RECORDING SIGNAL LINE

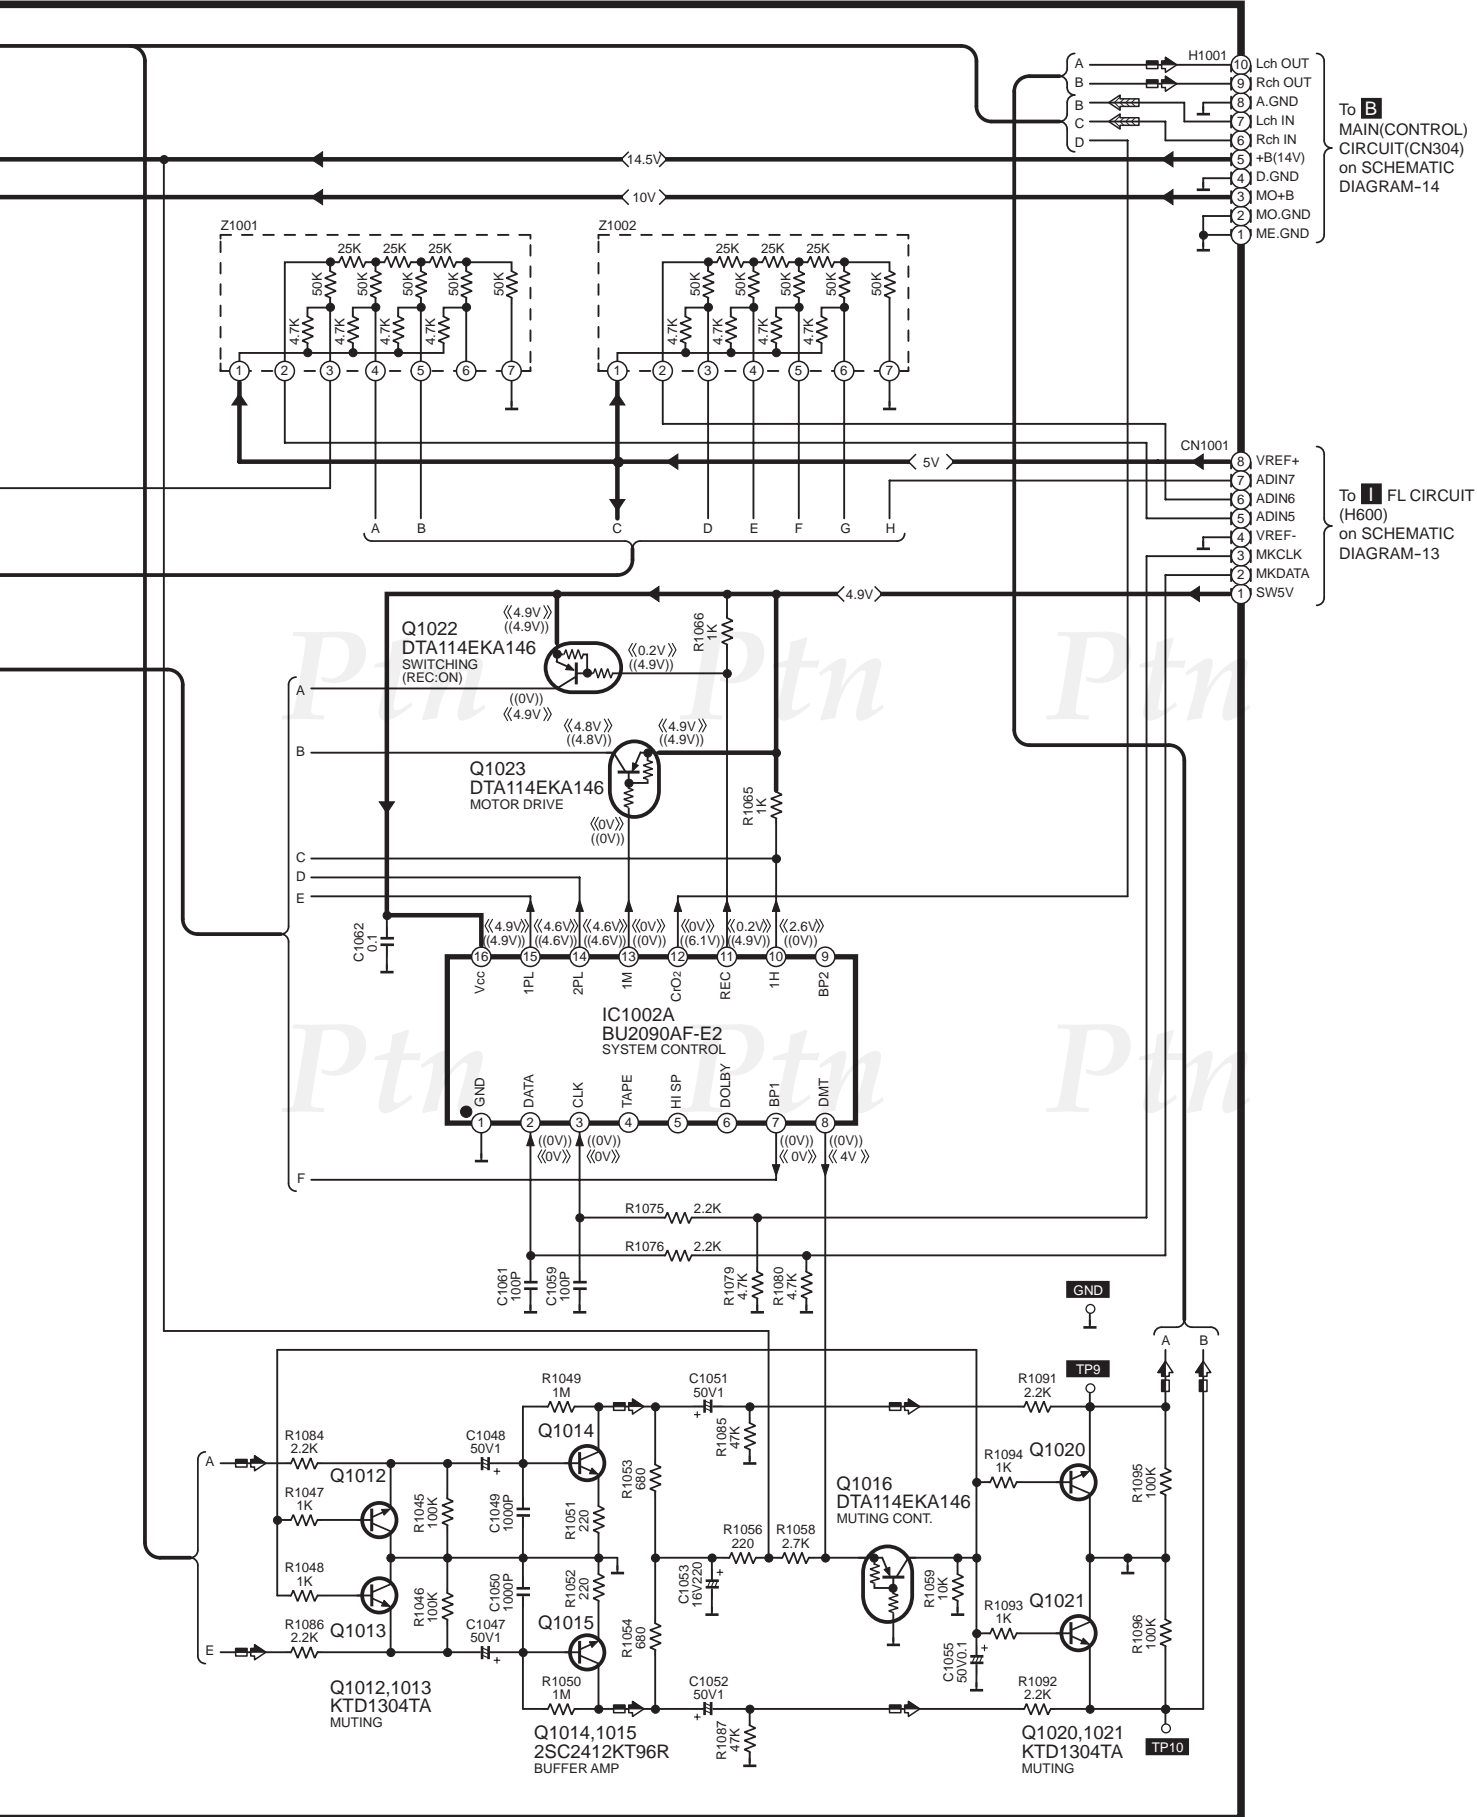

SCHEMATIC DIAGRAM-8

F VIDEO CIRCUIT

→ : POSITIVE VOLTAGE LINE
→ : CD-DA/V-CD (AUDIO & VIDEO) SIGNAL LINE
→ : CD-DA/V-CD (AUDIO) SIGNAL LINE
→ : V-CD (VIDEO) SIGNAL LINE

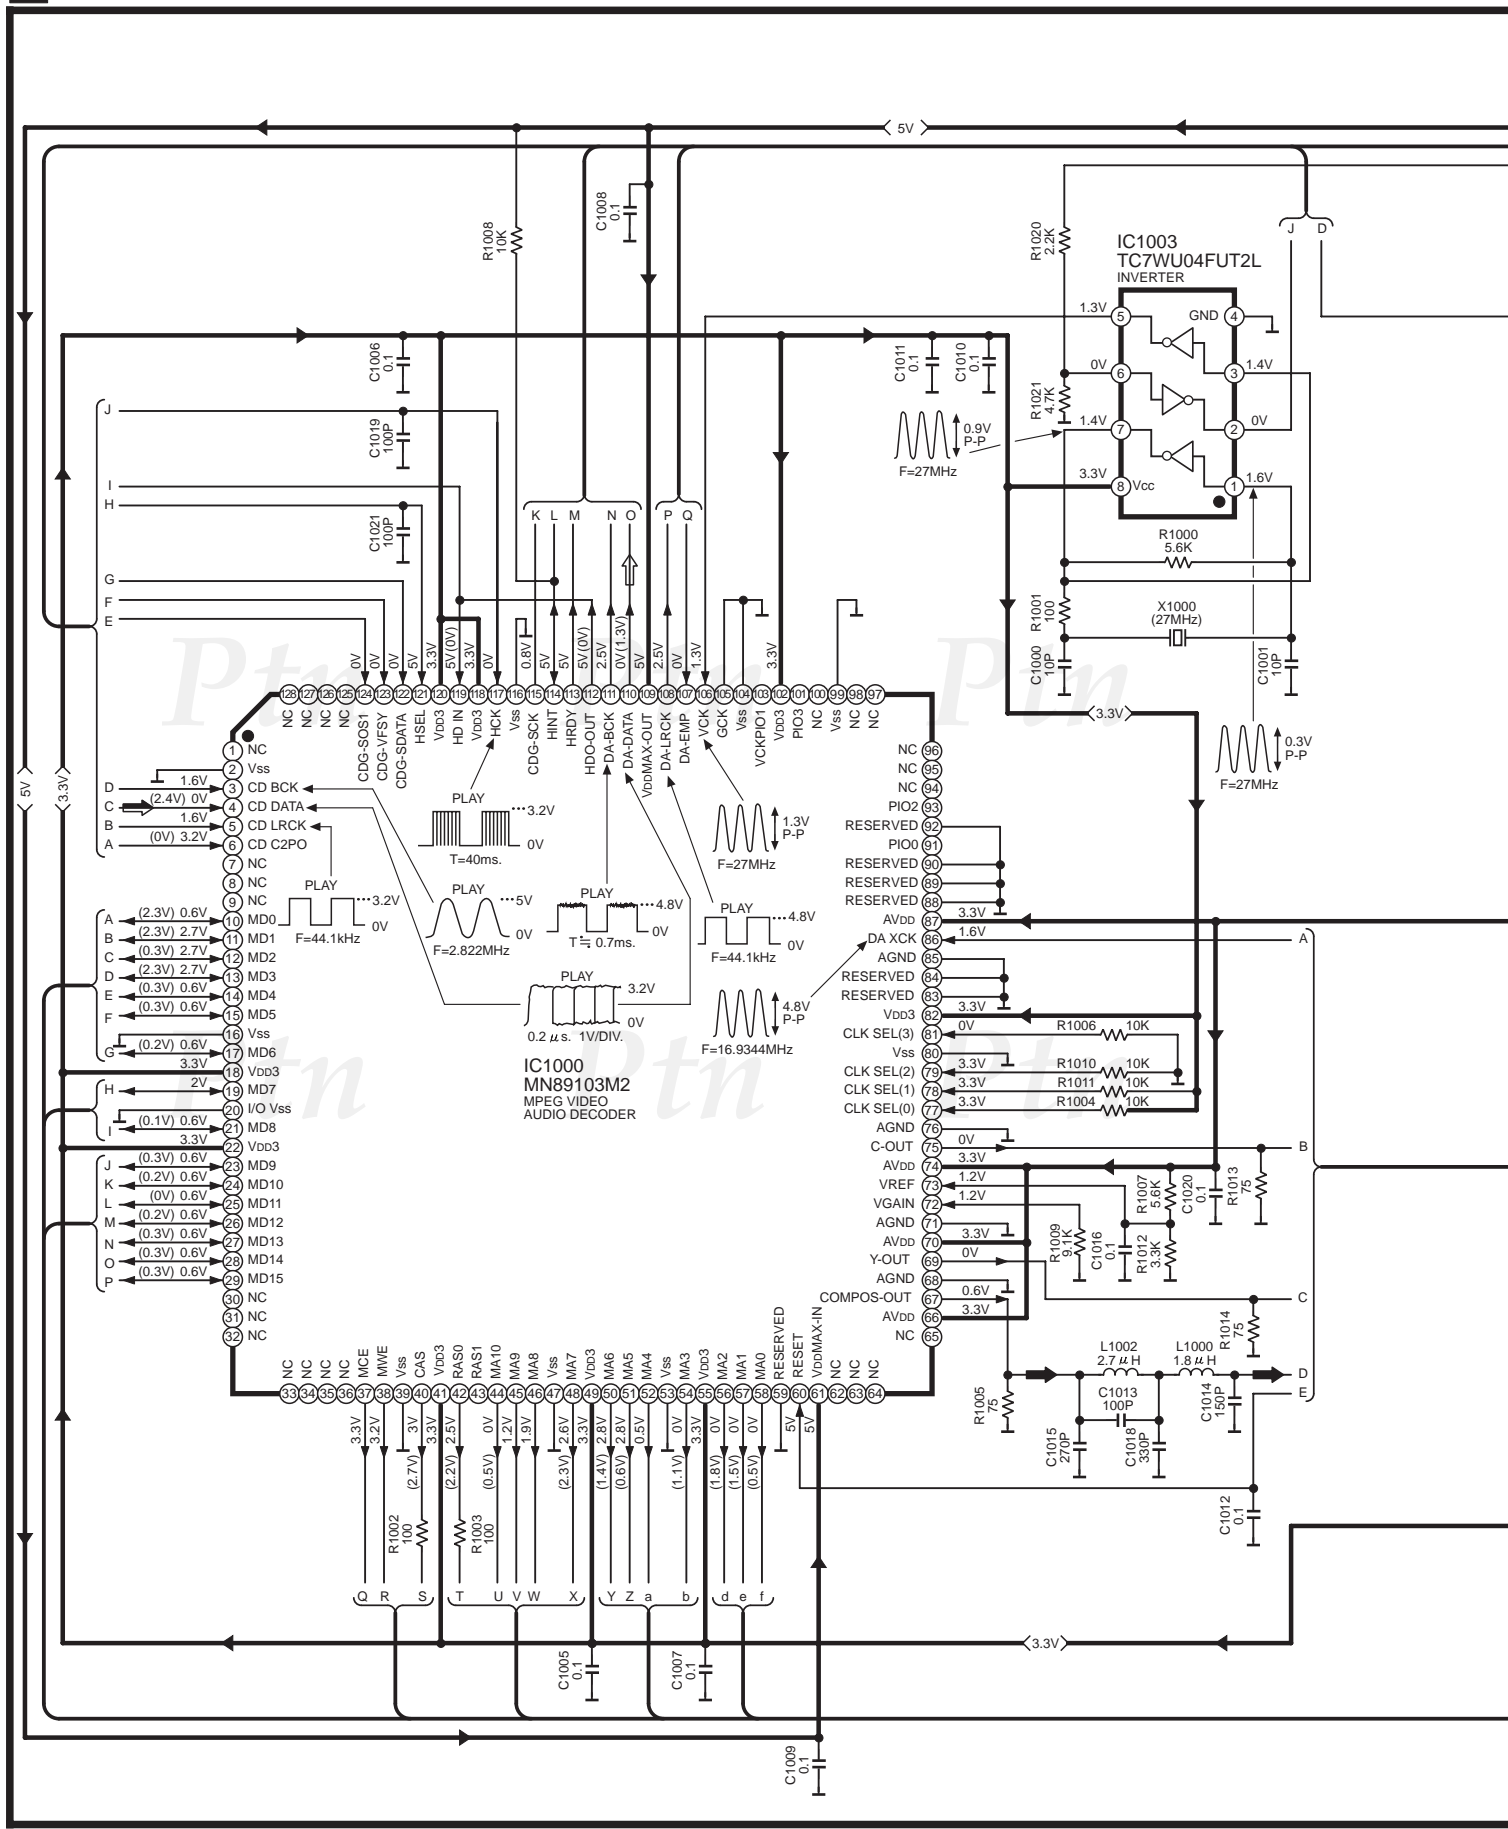


SCHEMATIC DIAGRAM-9

: POSITIVE VOLTAGE LINE

→
 : CD-DA/V-CD(AUDIO & VIDEO) SIGNAL LINE

⇌
 : CD-DA/V-CD(AUDIO) SIGNAL LINE

→
 : V-CD(VIDEO) SIGNAL LINE

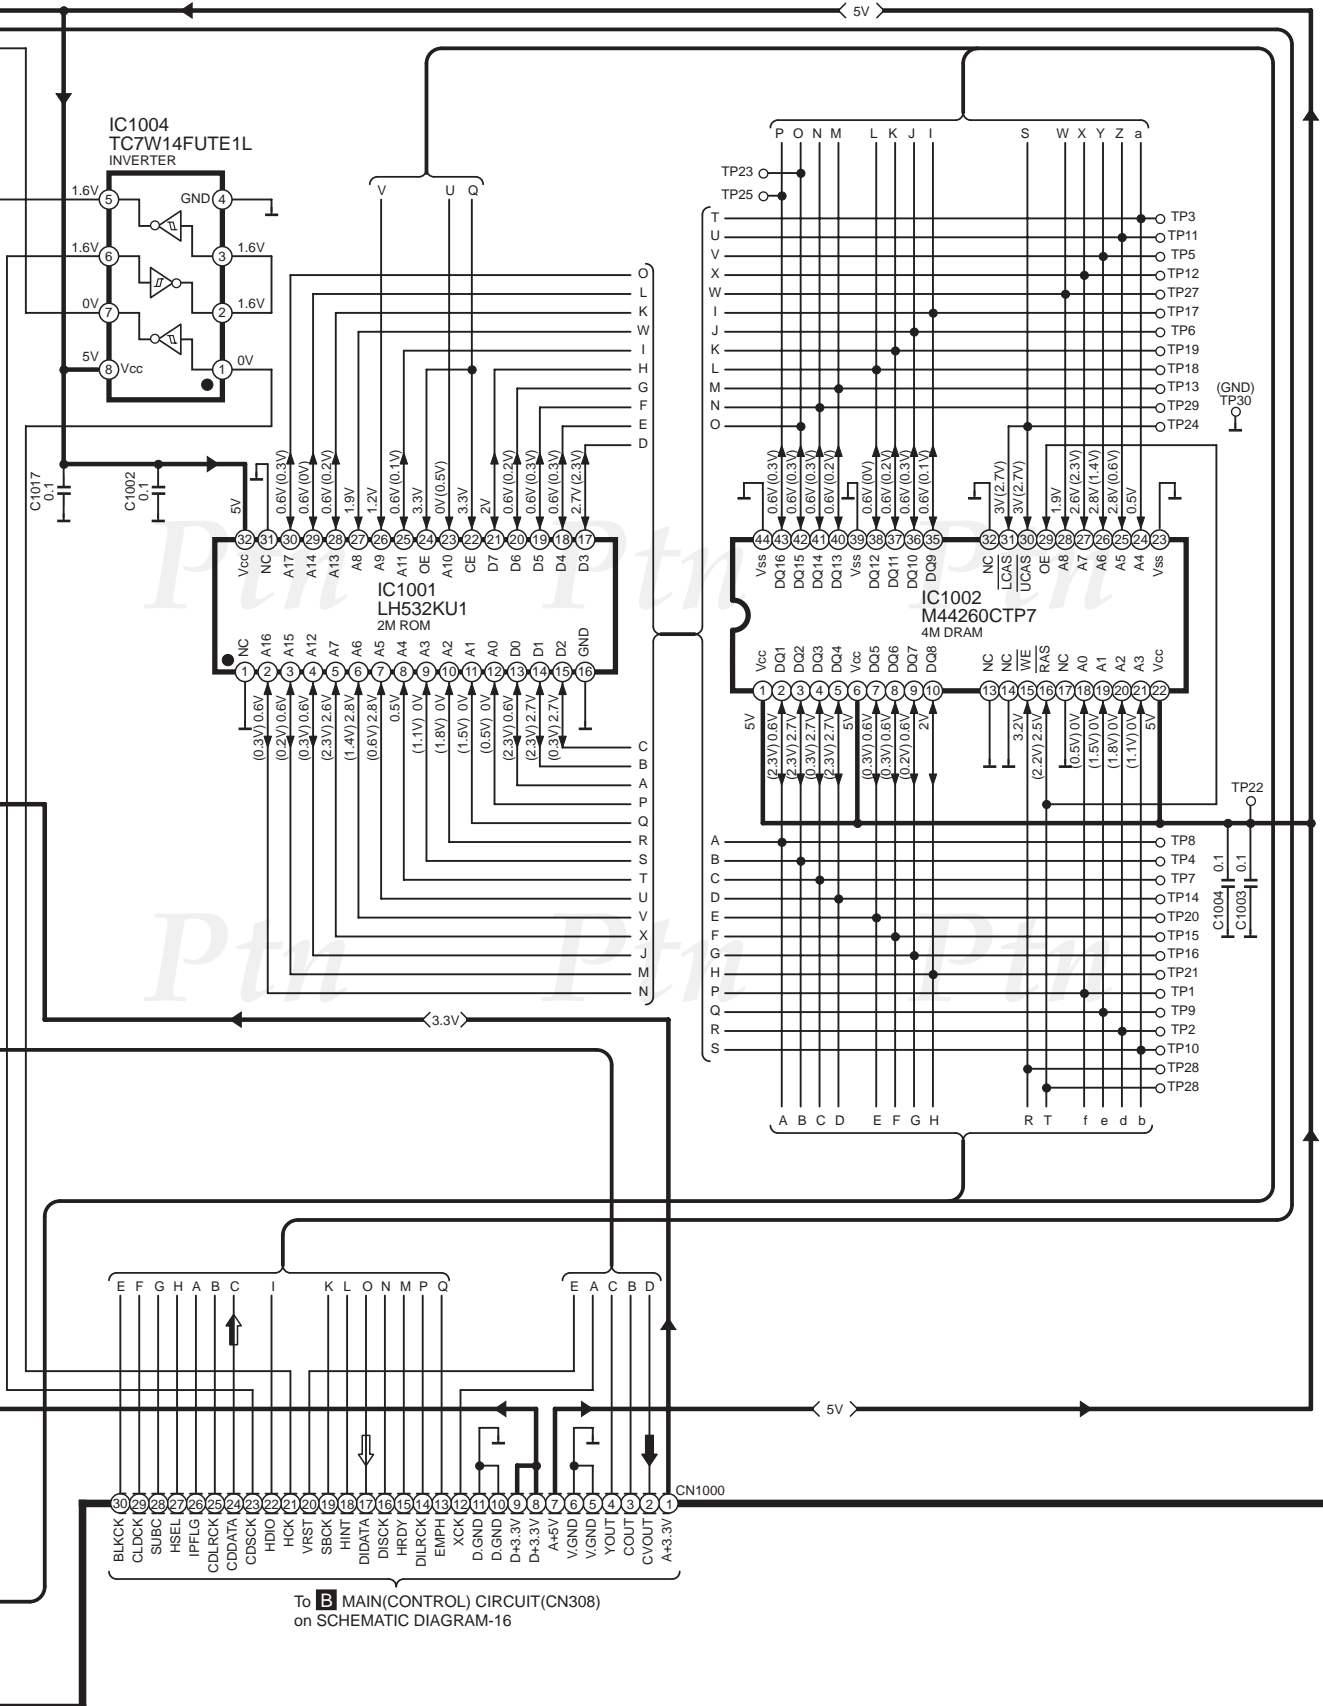


To **B** MAIN(CONTROL) CIRCUIT(CN308) on SCHEMATIC DIAGRAM-16


SCHEMATIC DIAGRAM-10

G OPERATION(1) CIRCUIT


⇨ : CD-DAV-CD(AUDIO) SIGNAL LINE ⇨ : MIC SIGNAL LINE

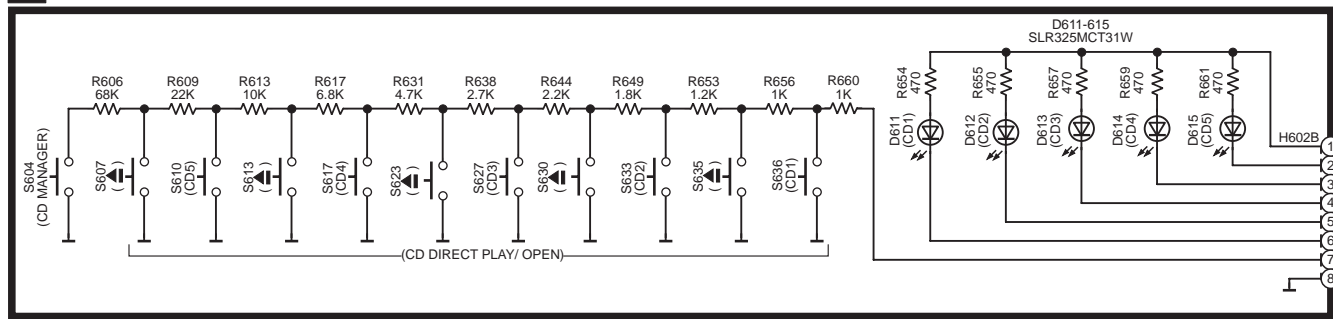

H OPERATION(2) CIRCUIT

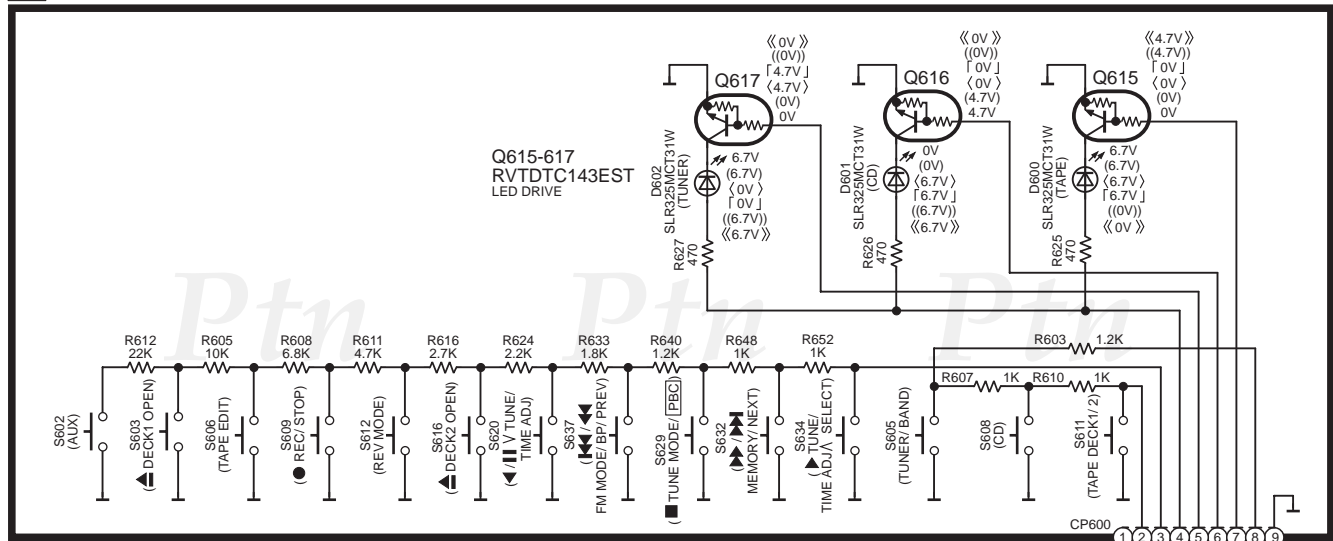


I FL CIRCUIT

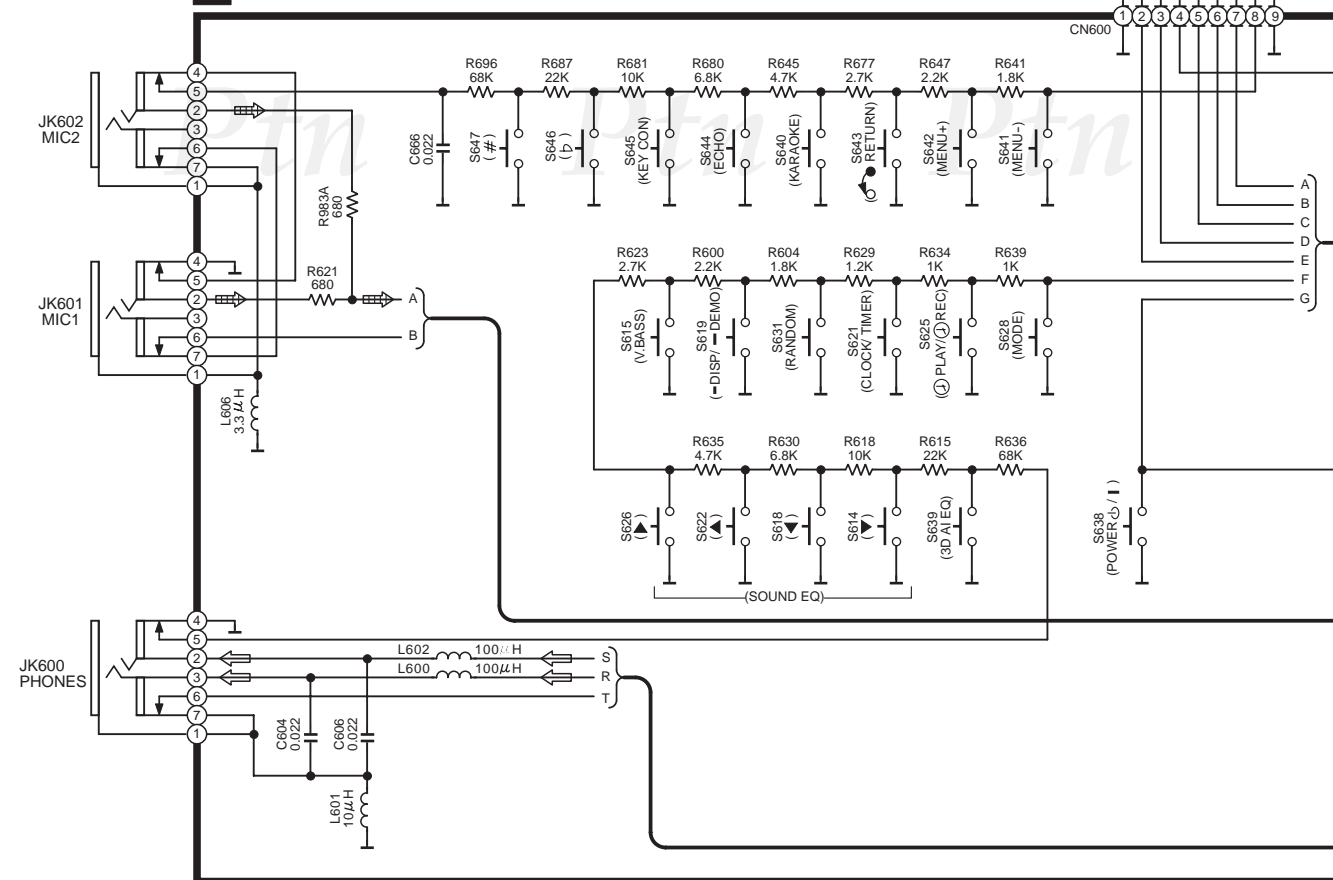

SCHEMATIC DIAGRAM-11


→ : POSITIVE VOLTAGE LINE ⇨ : MIC SIGNAL LINE

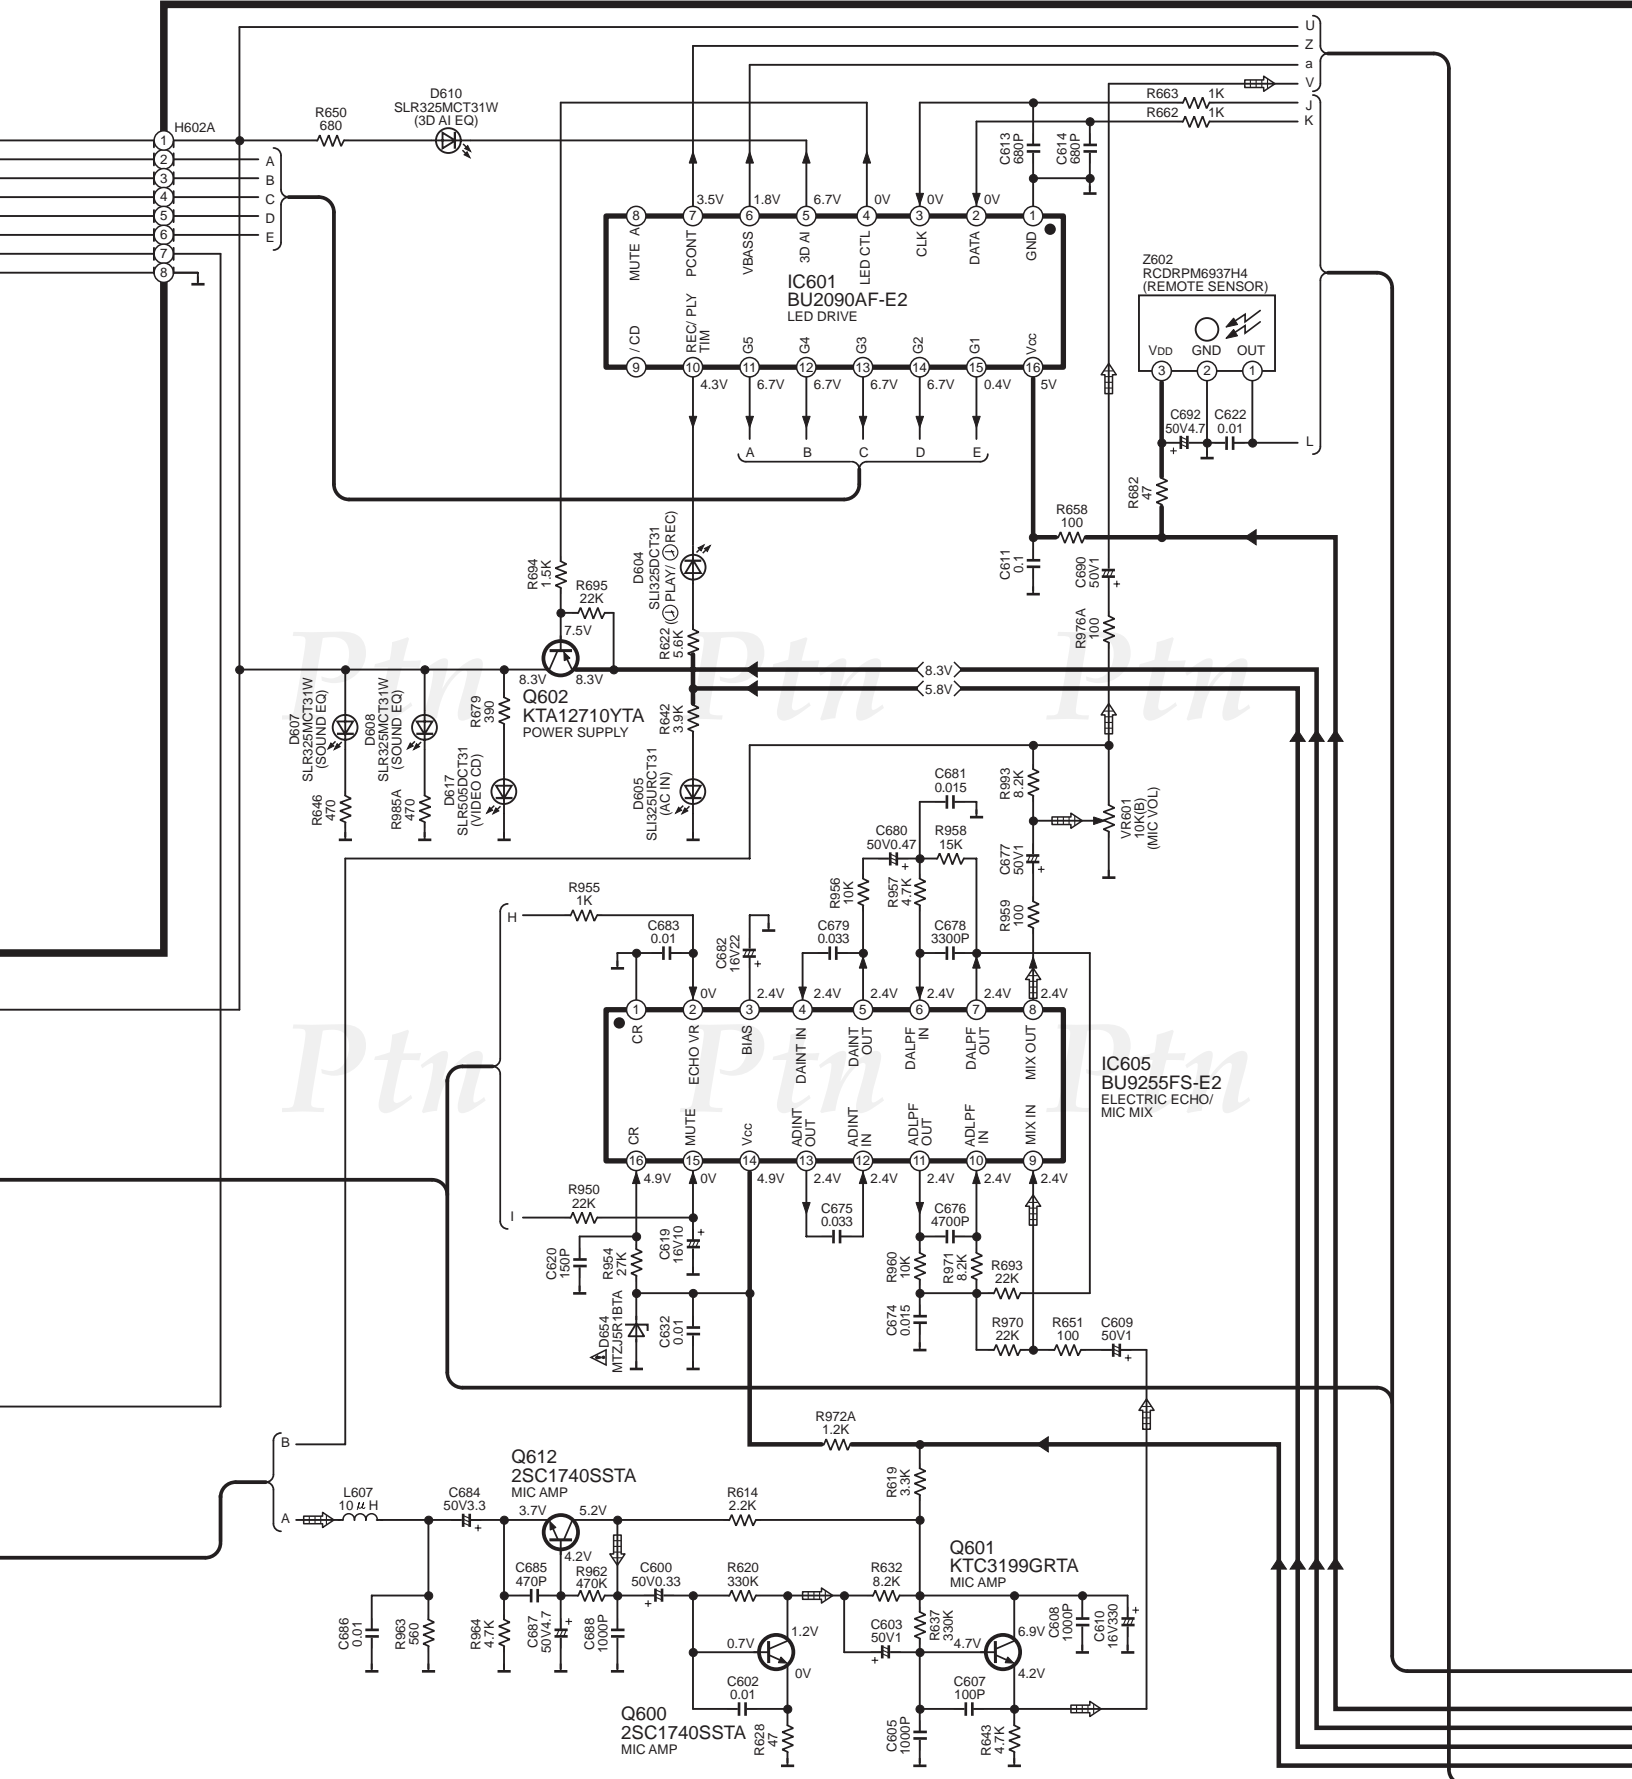

SCHEMATIC DIAGRAM-12



FL CIRCUIT

→ : POSITIVE VOLTAGE LINE - - - - - : NEGATIVE VOLTAGE LINE

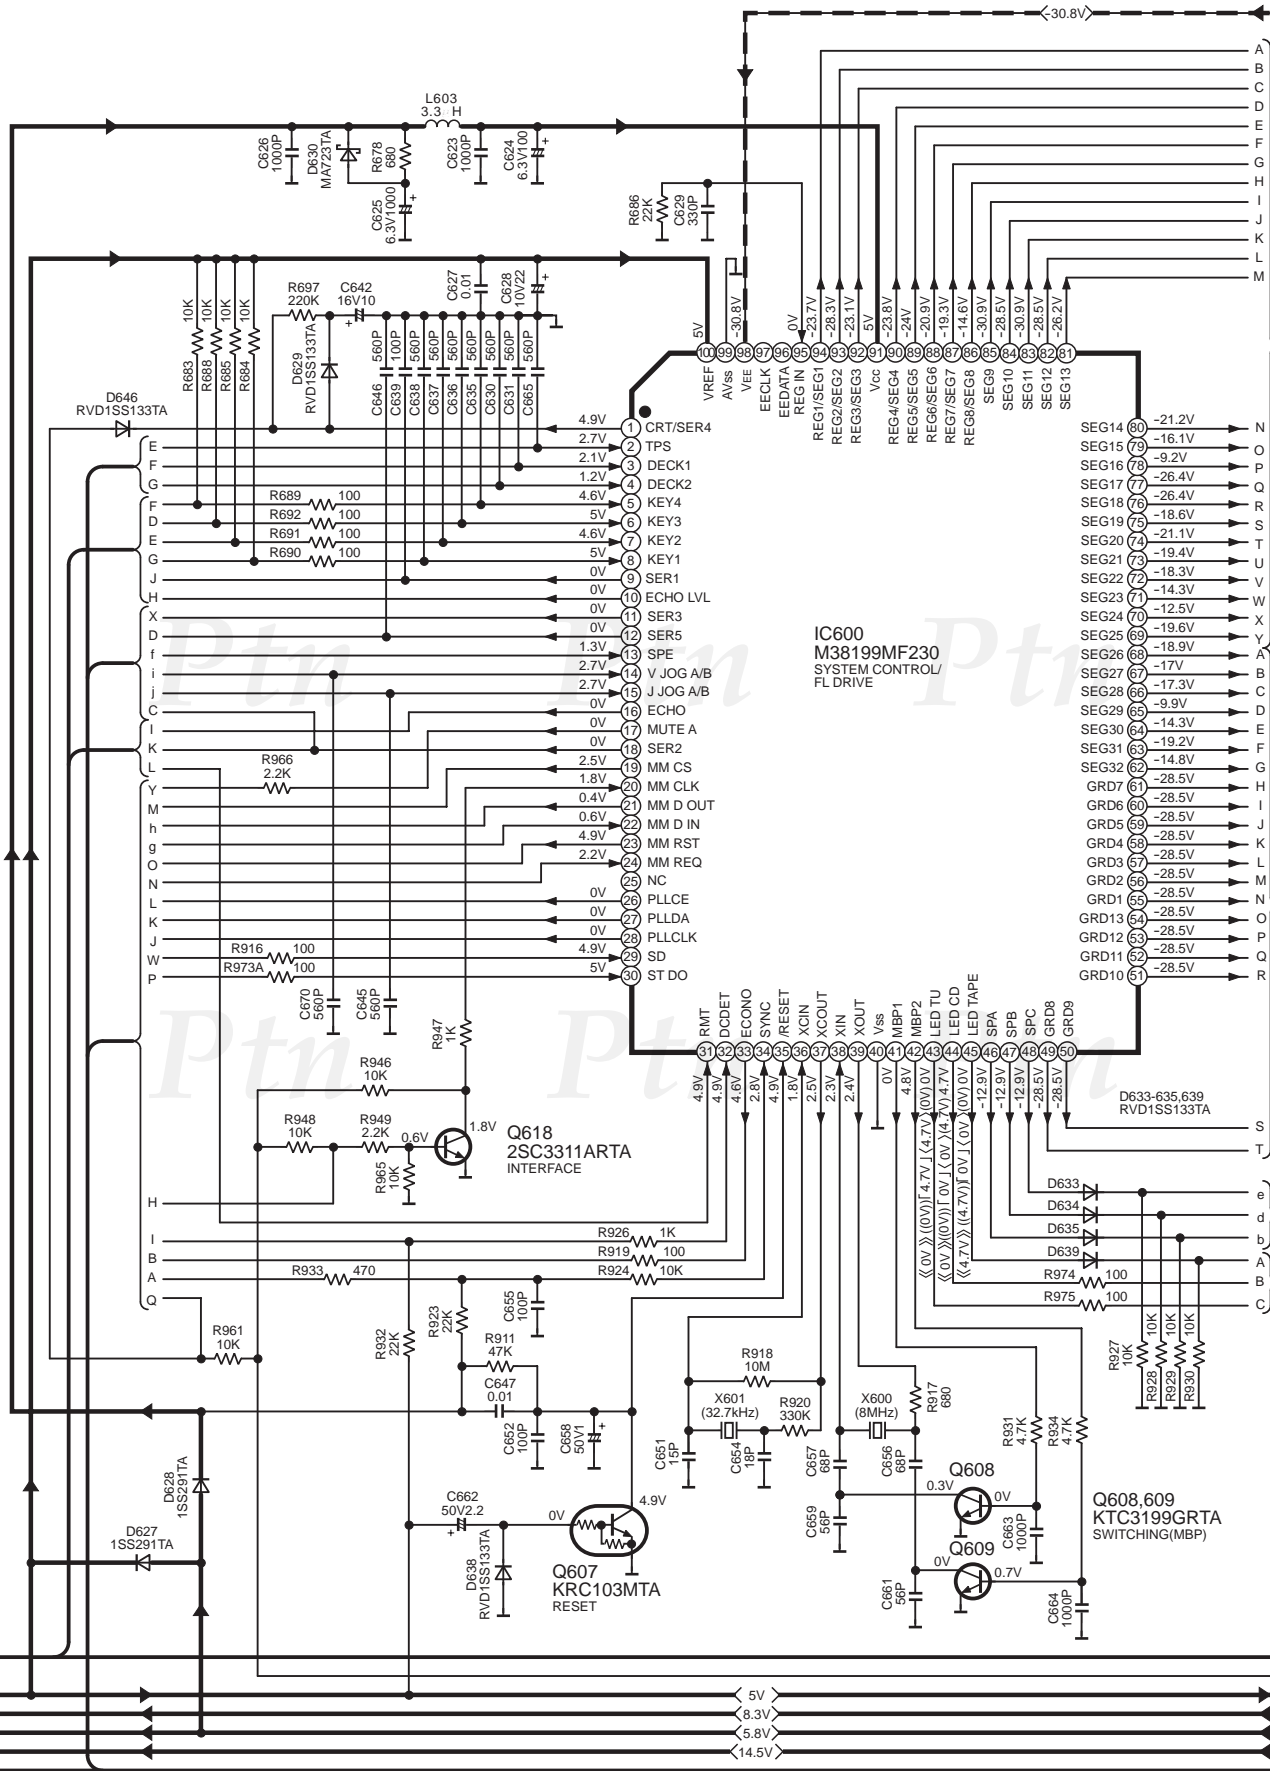

SCHEMATIC DIAGRAM-13

: POSITIVE VOLTAGE LINE : CD-DAV-CD(AUDIO) SIGNAL LINE
 : NEGATIVE VOLTAGE LINE : MIC SIGNAL LINE

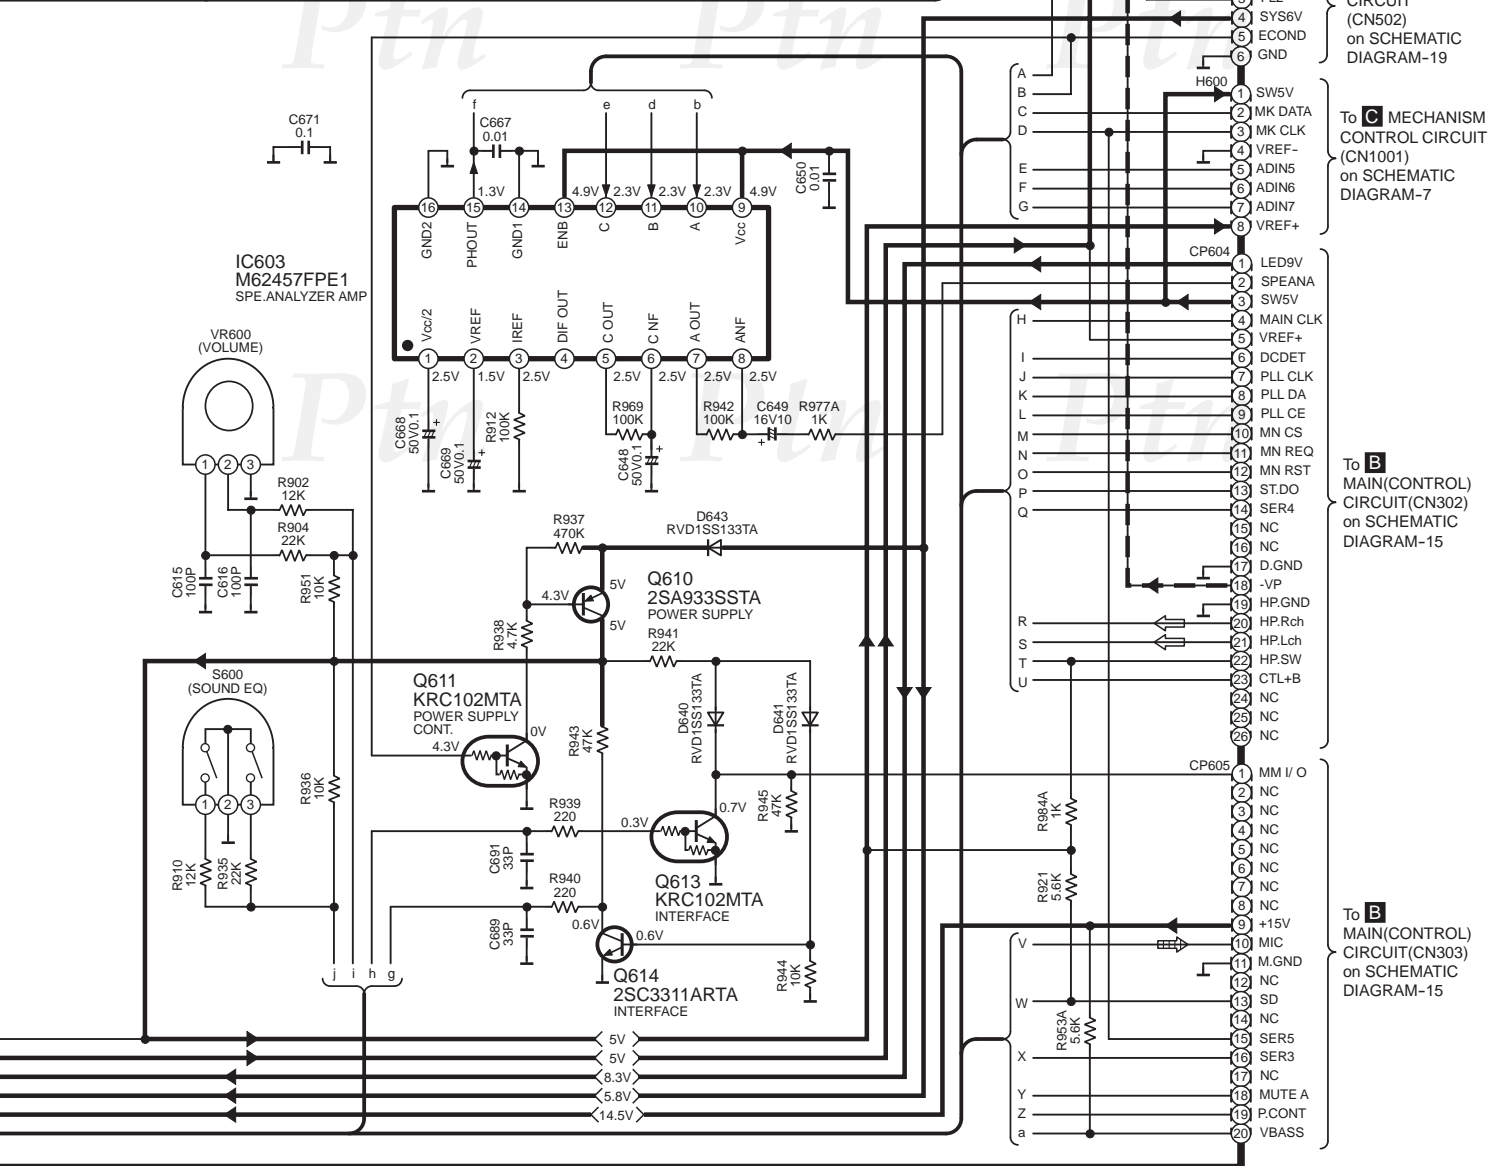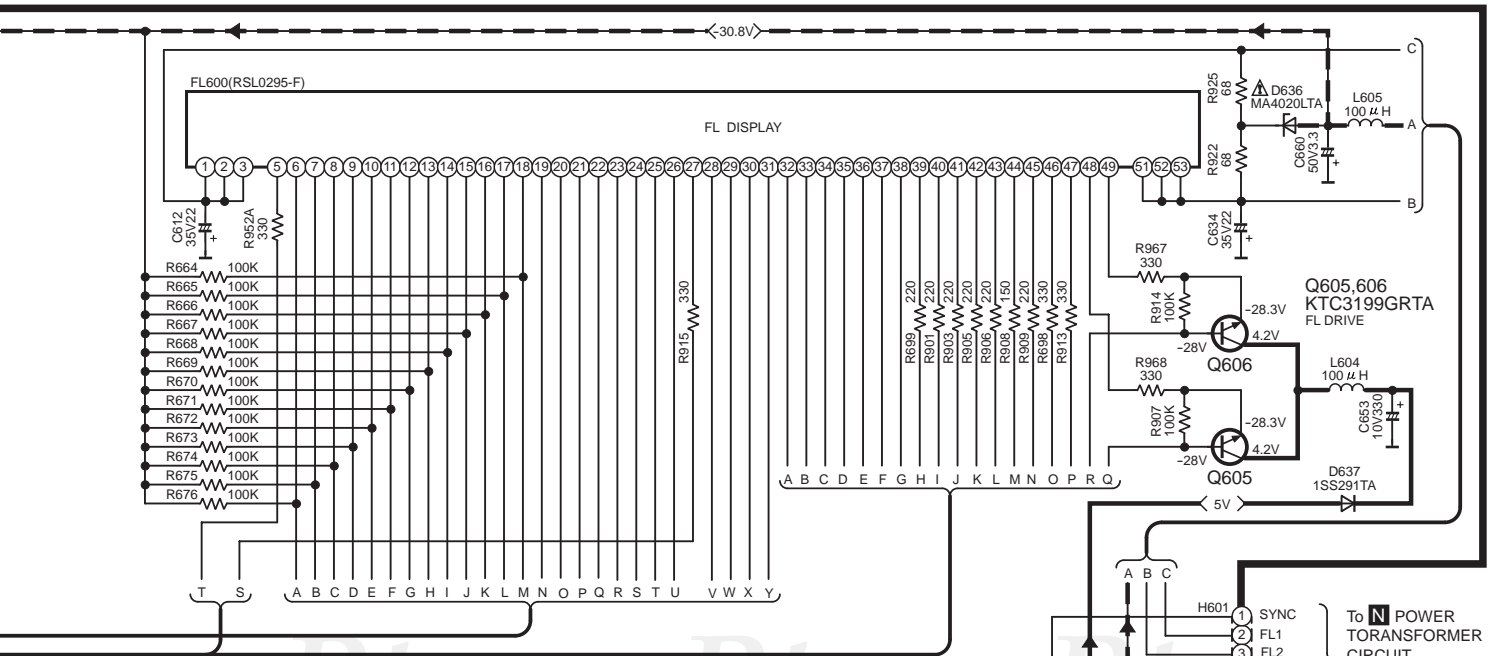

To **N** POWER TORANSFORMER CIRCUIT (CN502) on SCHEMATIC DIAGRAM-19

To **C** MECHANISM CONTROL CIRCUIT (CN1001) on SCHEMATIC DIAGRAM-7

To **B** MAIN(CONTROL) CIRCUIT(CN302) on SCHEMATIC DIAGRAM-15


To **B** MAIN(CONTROL) CIRCUIT(CN303) on SCHEMATIC DIAGRAM-15

SCHEMATIC DIAGRAM-14

B MAIN (CONTROL) CIRCUIT


: POSITIVE VOLTAGE LINE
 : NEGATIVE VOLTAGE LINE
 : CD-DA/V-CD(AUDIO) SIGNAL LINE
 : FM SIGNAL LINE
 : TAPE PLAYBACK SIGNAL LINE
 : AM SIGNAL LINE
 : TAPE RECORDING SIGNAL LINE

To **B** MAIN (TUNER) CIRCUIT (A) on SCHEMATIC DIAGRAM-4

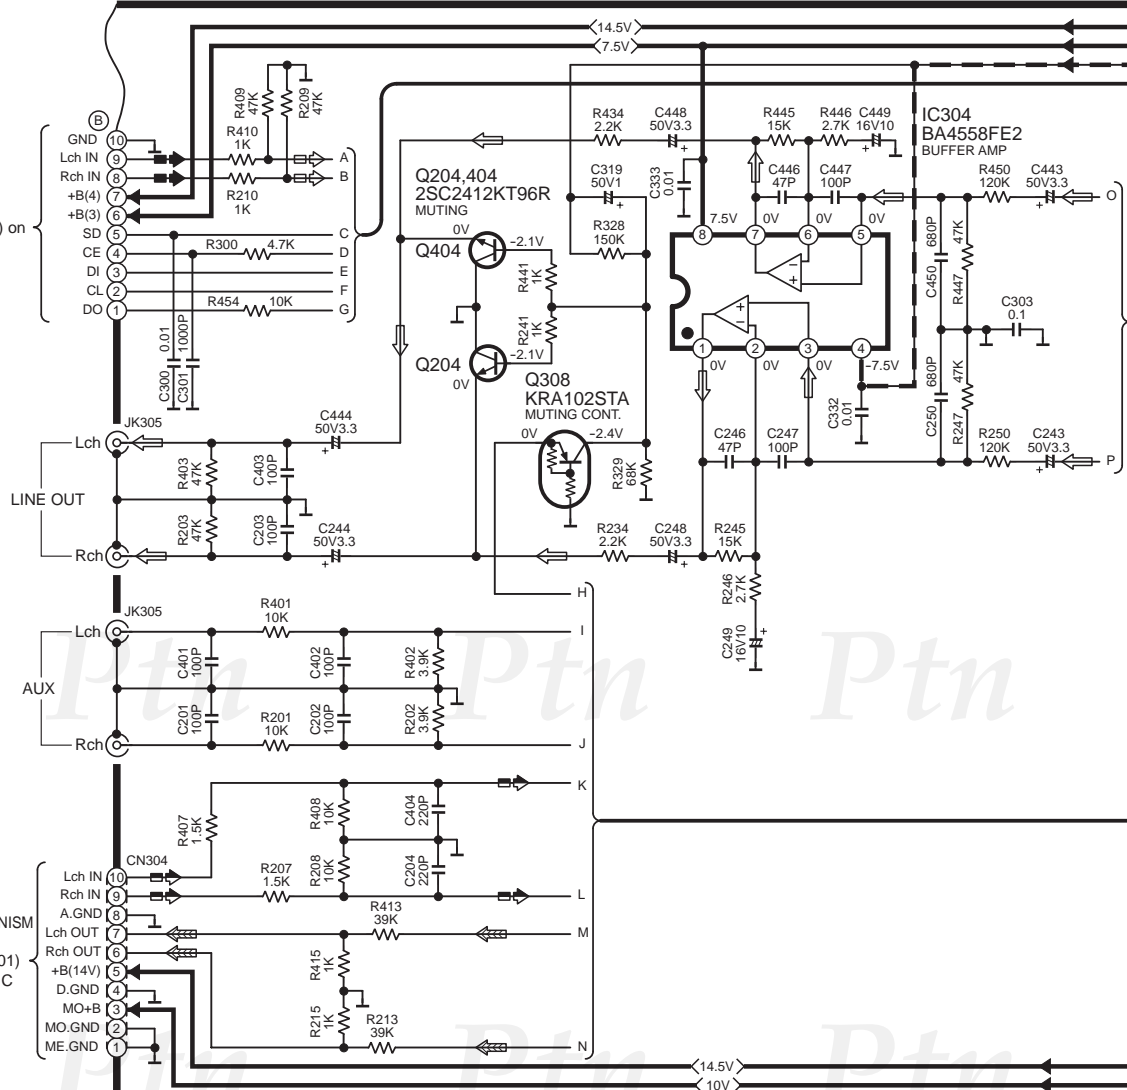


To **C** MECHANISM CONTROL CIRCUIT (H1001) on SCHEMATIC DIAGRAM-7


J LOADING MOTOR CIRCUIT

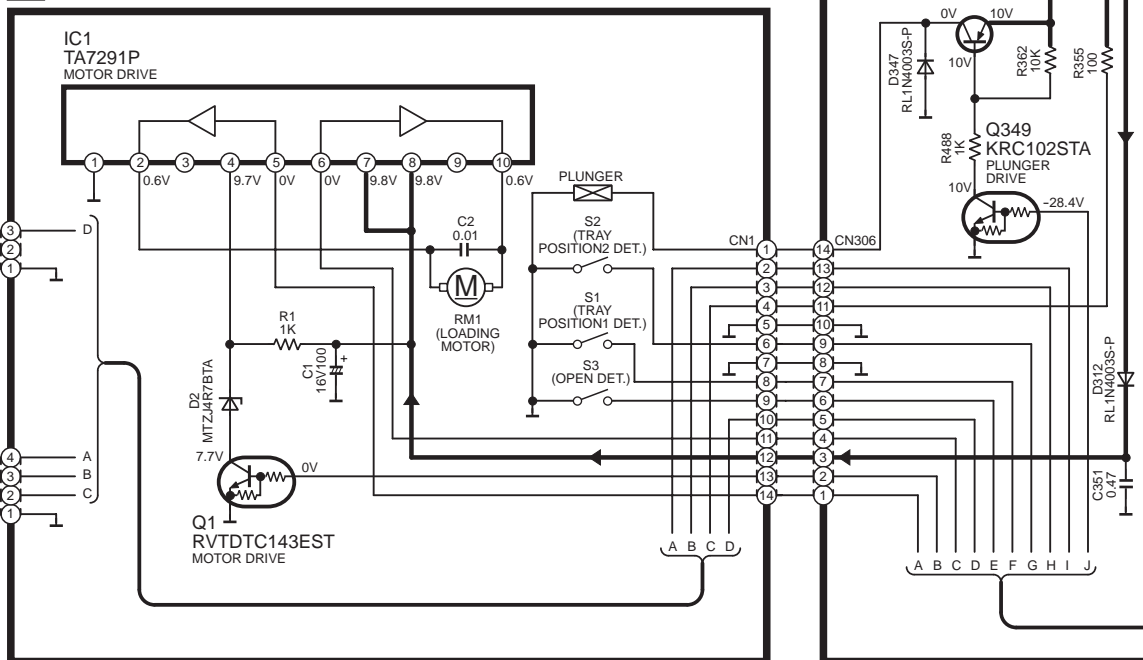

K CLAMP SW CIRCUIT

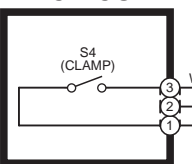

L BOTTOM SW CIRCUIT

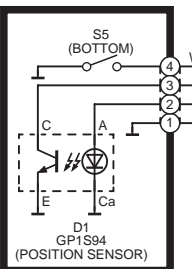


SCHEMATIC DIAGRAM-15

- : CD-DA/V-CD(AUDIO) SIGNAL LINE
- : FM SIGNAL LINE
- : AM SIGNAL LINE
- ▶ : TAPE PLAYBACK SIGNAL LINE
- ◀ : TAPE RECORDING SIGNAL LINE
- ⊞ : MIC SIGNAL LINE

→ : POSITIVE VOLTAGE LINE - - - - - : NEGATIVE VOLTAGE LINE

To FL CIRCUIT(CP604) on SCHEMATIC DIAGRAM-13

To FL CIRCUIT(CP605) on SCHEMATIC DIAGRAM-13

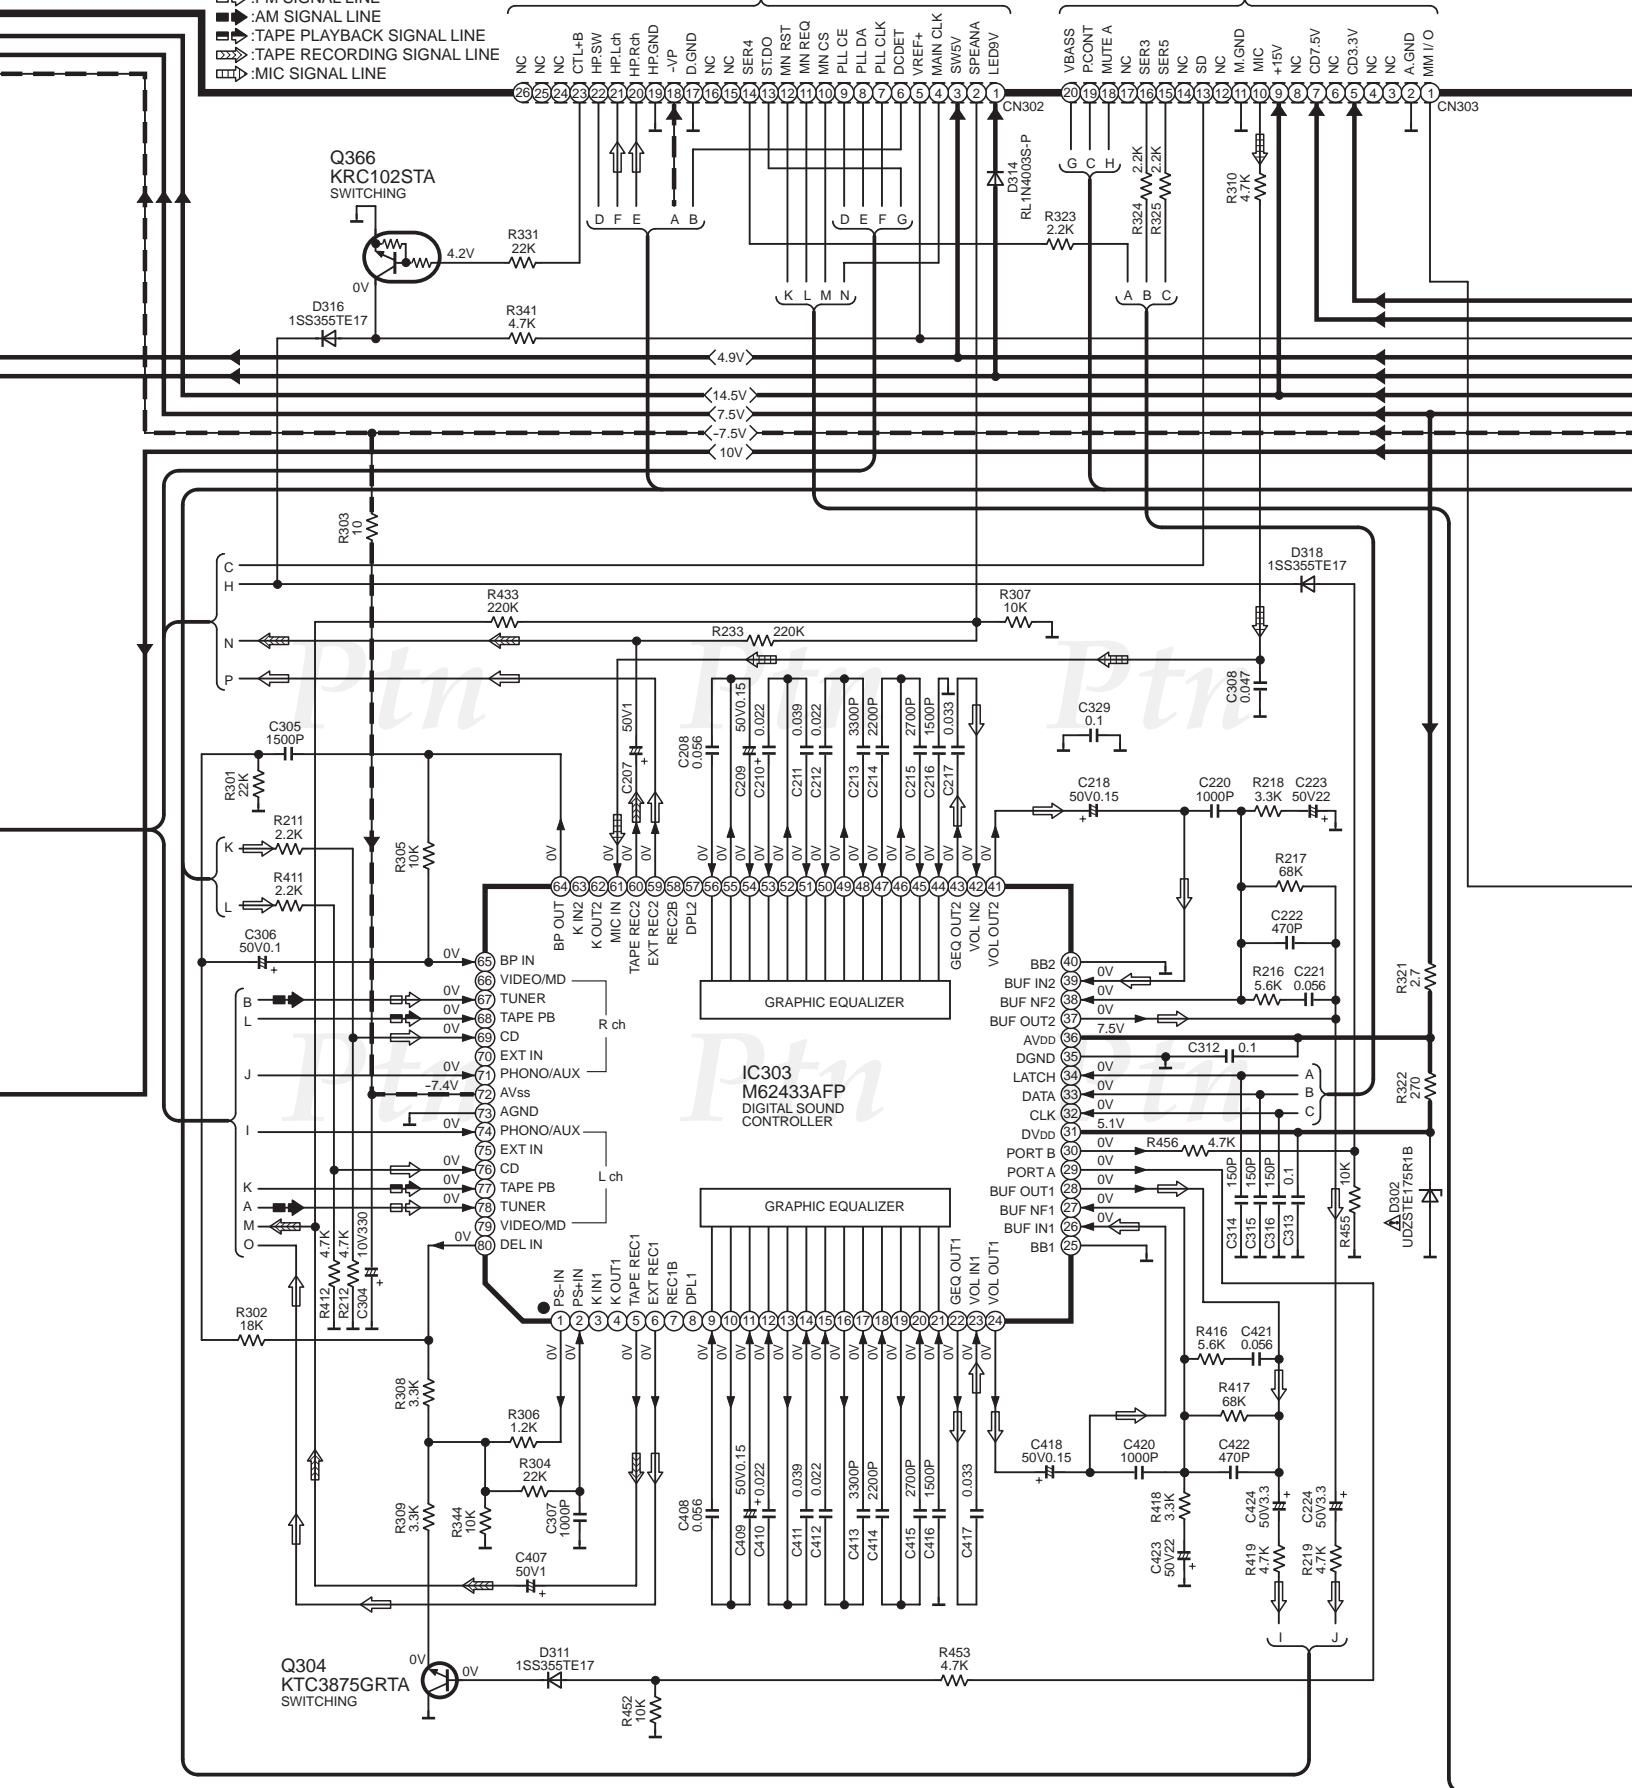


SCHEMATIC DIAGRAM-16

⇒:CD-DAV-CD(AUDIO & VIDEO) SIGNAL LINE ⇐:CD-DAV-CD(AUDIO) SIGNAL LINE ⇐:V-CD(VIDEO) SIGNAL LINE


To VIDEO CIRCUIT(CN1000) on SCHEMATIC DIAGRAM-8 —: POSITIVE VOLTAGE LINE - -: NEGATIVE VOLTAGE LINE

B MAIN(CONTROL) CIRCUIT

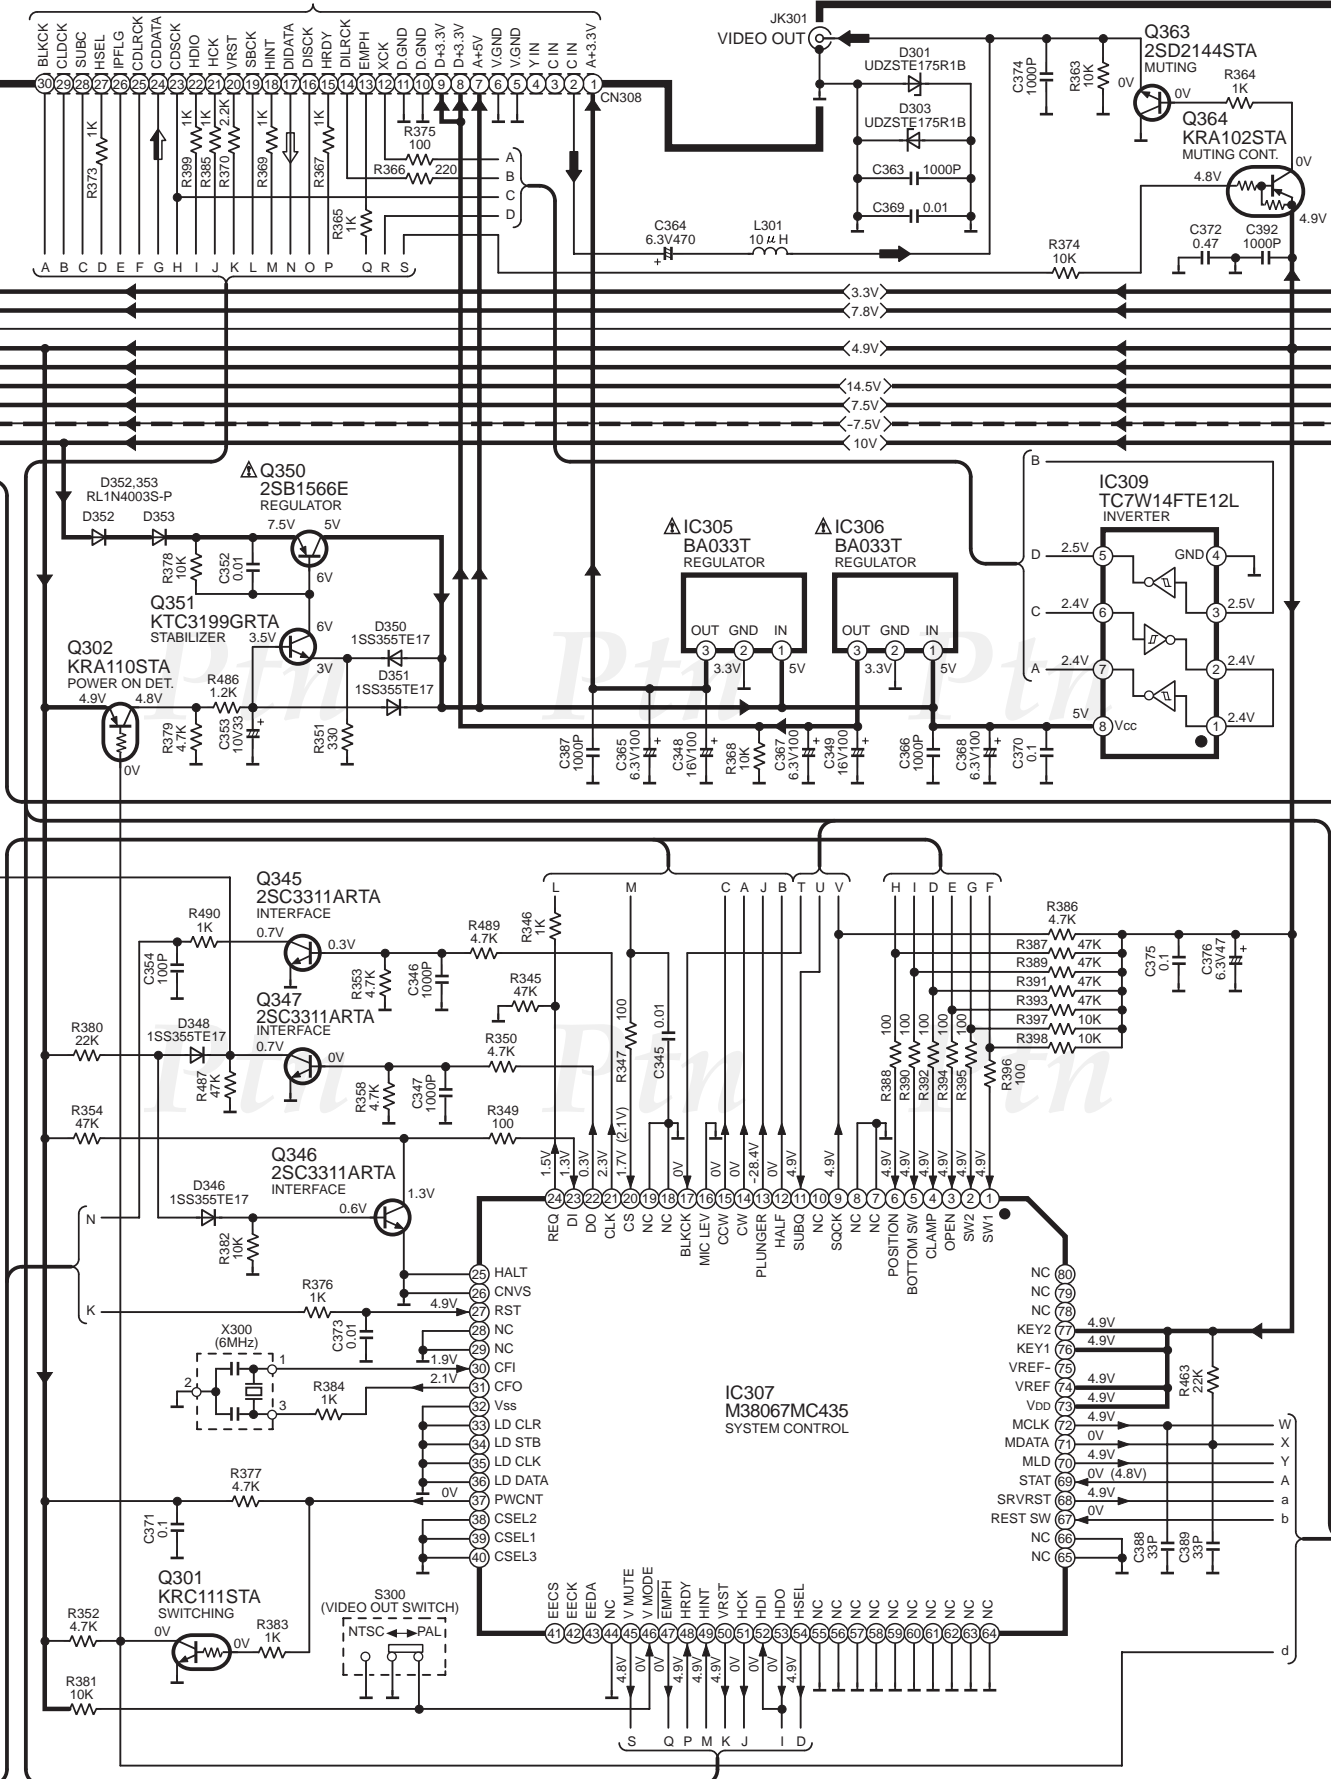

M POWER AMP CIRCUIT


→ : POSITIVE VOLTAGE LINE
 - - - - - : NEGATIVE VOLTAGE LINE
 ⇨ : CD-DA/V-CD(AUDIO) SIGNAL LINE

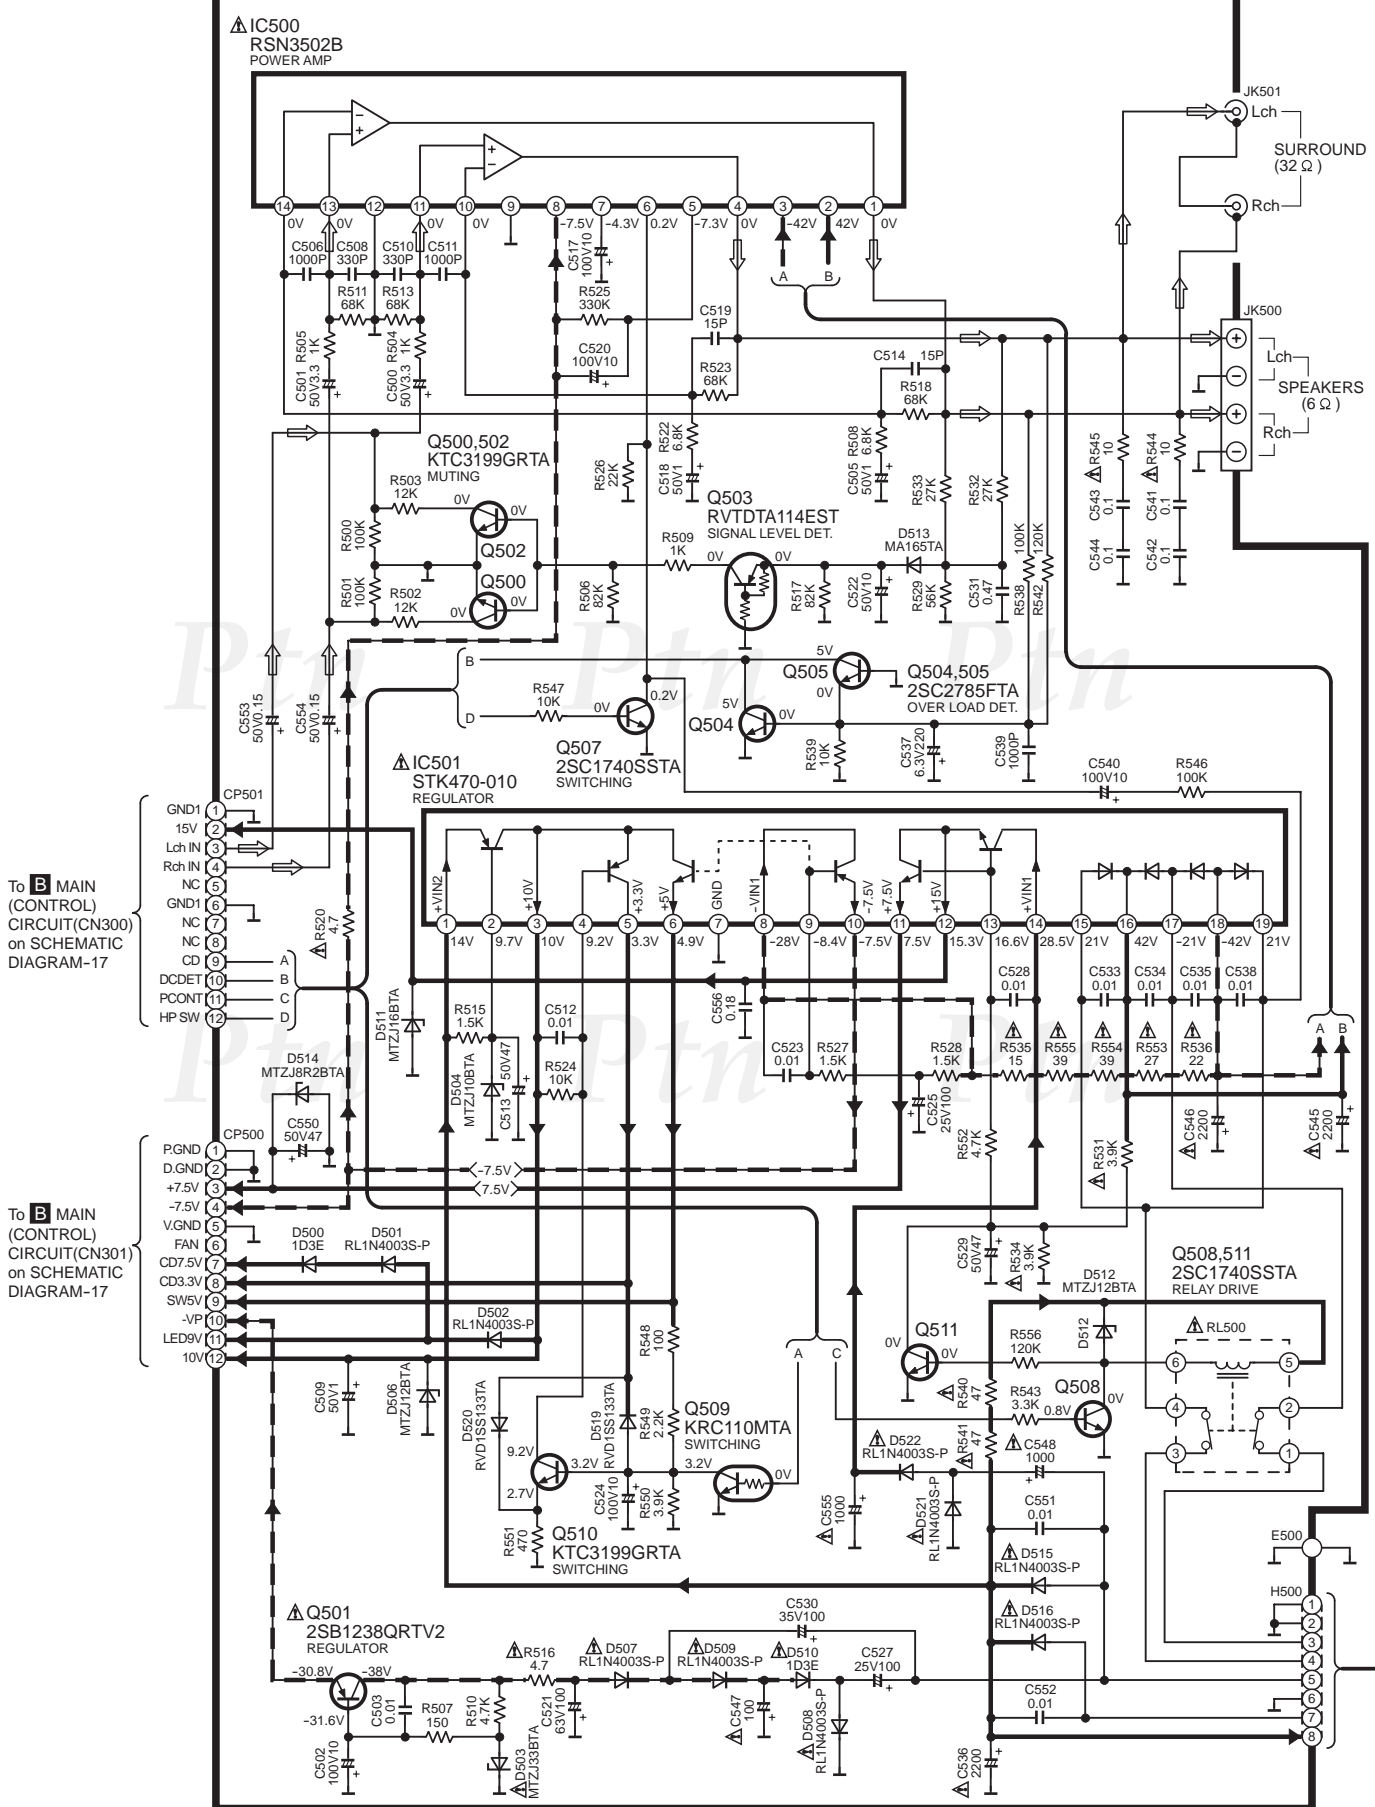


To **B** MAIN (CONTROL) CIRCUIT(CN300) on SCHEMATIC DIAGRAM-17

To **B** MAIN (CONTROL) CIRCUIT(CN301) on SCHEMATIC DIAGRAM-17


Ptn Ptn Ptn

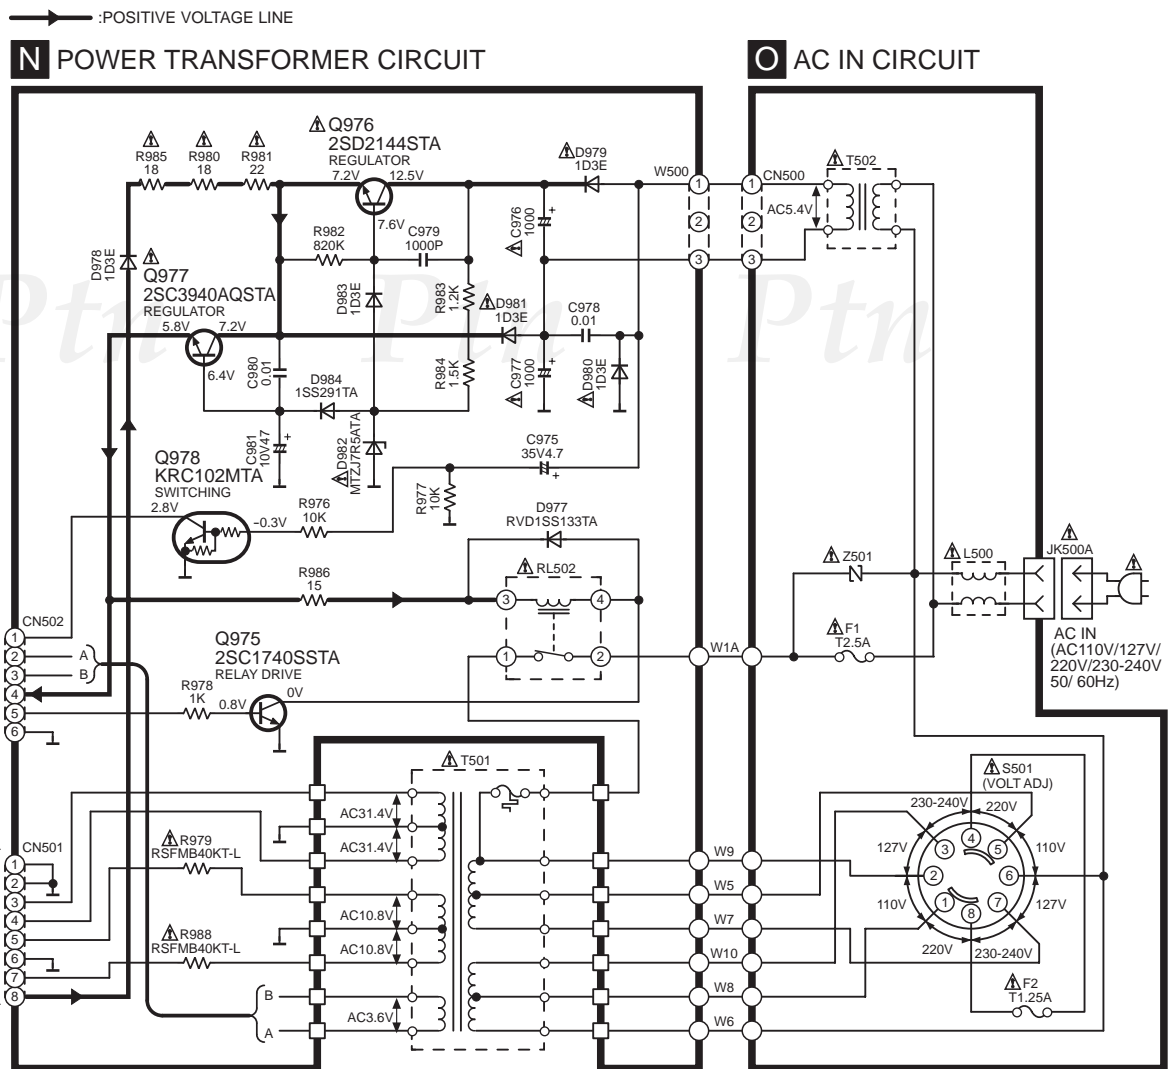

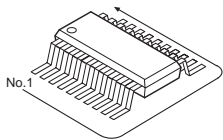


AN7348STA-E1	24PIN
AN8839NSBE2	28PIN
BU9255FS-E2	16PIN
BU2090AF-E2	16PIN
LA1833NMNTLM	24PIN
LC72131MDTRM	20PIN
LH532KU1	32PIN
M62457FPE1	16PIN


MN662790RSC	80PIN
MN89103M2	128PIN

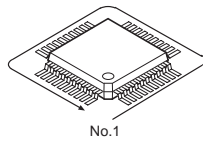


M5218AP

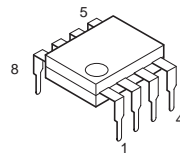


M62433AFP
M38067MC435

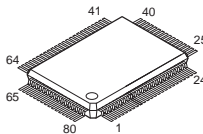


BA4558FE2

 


AN8739SBE2

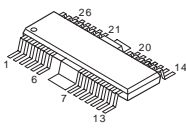


M38199MF230

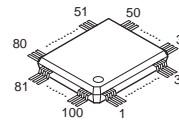


ON2180RLC1

 


TA7291P

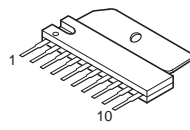


STK470-010

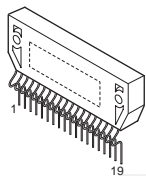


BA033T

 


BA7755A

 


TC7WU04FUT2L
TC7W14FUTE1L

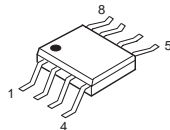



M44260CTP7

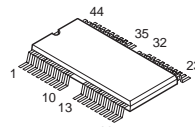

TC7W14FTE12L

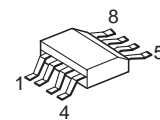

RSN3502B

 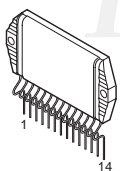



2SA933SSTA
2SC1740SSTA
2SC2058SPTA
2SD2144STA
KRA102MTA
KRC102MTA

KRC103MTA
KRC110MTA
KTC3199GRTA
RVTDTA114EST
RVTDTA143EST



2SC2784FTA
2SC2785FTA
2SC2786MTA
2SC2787FL1TA
2SC3311ARTA

 
2SB621ARSTA
2SD965RTA
KTA12710YTA

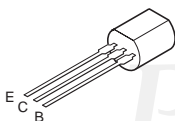


2SA1037AKSTX
2SC2412KT96R
DTA114EKA146
DTC144TKA146
KRA102STA
KRA110STA

KRC101STA
KRC102STA
KRC111STA
KTC3875GRTA
KTD1304TA


2SC3940AQSTA

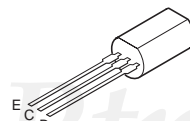


2SK544F-AC

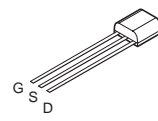



2SB1238QRTV2

 

2SB1566E

 


GP1S94

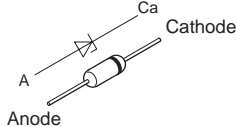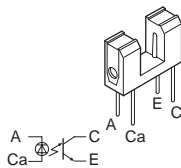


MTZJ10BTA
MTZJ12BTA
MTZJ16BTA
MTZJ33BTA
MTZJ4R7BTA
MTZJ5R1BTA
MTZJ7R5ATA
MTZJ8R2BTA


MA165TA
RVD1SS133TA

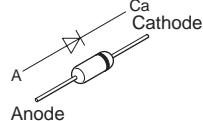



1SS291TA

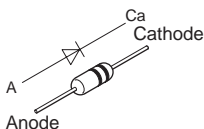

MA4020LTA

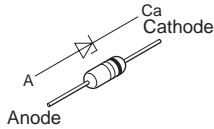


1D3E
RL1N4003S-P

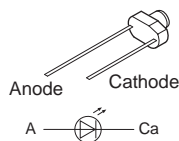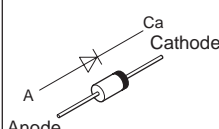


SLI325DCT31
SLI325URCT31
SLR325MCT31W
SLR505DCT31


SVC211SPA-AL

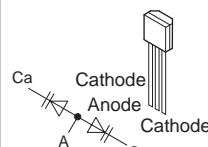


UDZSTE175R1B
UDZTE173R6B

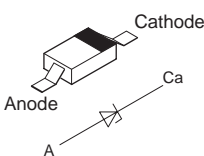

1SS355TE17

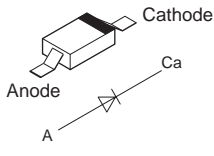

DAP202KT146

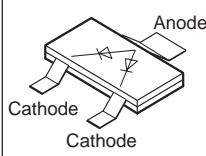

MA723TA

